EXPLODED VIEWS AND PARTS LIST

2

1


А

NOTES : • Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

• The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

3

- Screws adjacent to \checkmark mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

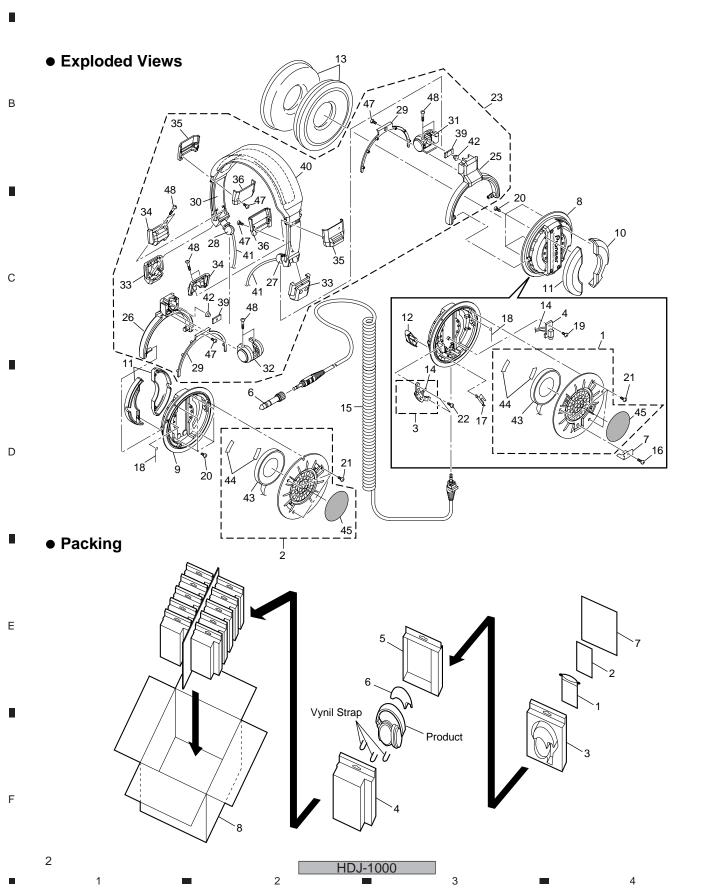

• EXPLODED VIEWS PARTS LIST

5

<u>Mark</u> No.	Description	Part No.	<u>Mark</u>	<u>No.</u>	Description	Part No.	
1	Speaker Unit Assy L	WXX1332		26	Hunger	WNK2142	
2	Speaker Unit Assy R	WXX1333	NSP	27	Slider	WNK2143	
3	SW Board Assy	WXX1334	NSP	28	Slider	WNK2144	
4	Jack Board Assy	WXX1335		29	Cover	WNK2145	_
5	• • • • •		NSP	30	Cover	WNK2146	- 1
6	Plug Adapter	WKX1035		31	Housing	WNK2147	
7	Bracket	WNA1118		32	Housing	WNK2148	
8	Case	WNK2137		33	Holder	WNK2149	
9	Case	WNK2138		34	Holder	WNK2150	в
10	Pad	WNK2155	NSP	35	Cover	WNK2151	_
11	Pad	WNK2156	NSP		Cover	WNK2152	
12	Knob	WNK2157		37	• • • • •		
13	Ear Pad	WNV1101		38	• • • • •		
NSP 14	Cord	WDC1064		39	Plate	WNK2159	
15	Cord Assy	WDE1197	NSP	40	Cushion	WNV1102	
10	Corour			44	Card	WDC1062	
16 17	Screw	PMZ20P060FZK WBK1012	NSP	41	Cord	WDC1063 WBH1027	
	Plate Spring	WBX1002	NSP		Spring		
18	Spring				Speaker Cushion	WWW1043	
19	Screw	PPK25P040FZK	NSP			WER1092	С
20	Screw	PPZ18P060FNI	NSP	45	Sound Absorber	WER1091	
21	Screw	PPZ20P060FZK		46	• • • • •		
22	Screw	PPZ25P060FZK		47	Screw	PPZ20P050FNI	
23	Band Slider Assy	WXX1331		48	Screw	PPZ20P130FNI	
24	• • • • •						
25	Hunger	WNK2141					-

7

8

А

D

Е

F

6

• PACKING PARTS LIST

5

Description	Part No.			
Carrying Pouch	WMA1111			
Operating Instructions	WRB1048			
(German / Italian / Spanish / Dutch / Chinese)				
Inner Case	WHF1085			
Outer Case	WHG1768			
Decoration Paper	WHG1769			
Decoration Paper	WHG1773			
Mount Paper	WHG1774			
Master Carton	WHP1478			
	Carrying Pouch Operating Instructions (German / Italian / Spanish Inner Case Outer Case Decoration Paper Decoration Paper Mount Paper			

HDJ-1000

6

7

3

8