


2. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

2.1 EXPLODED VIEWS

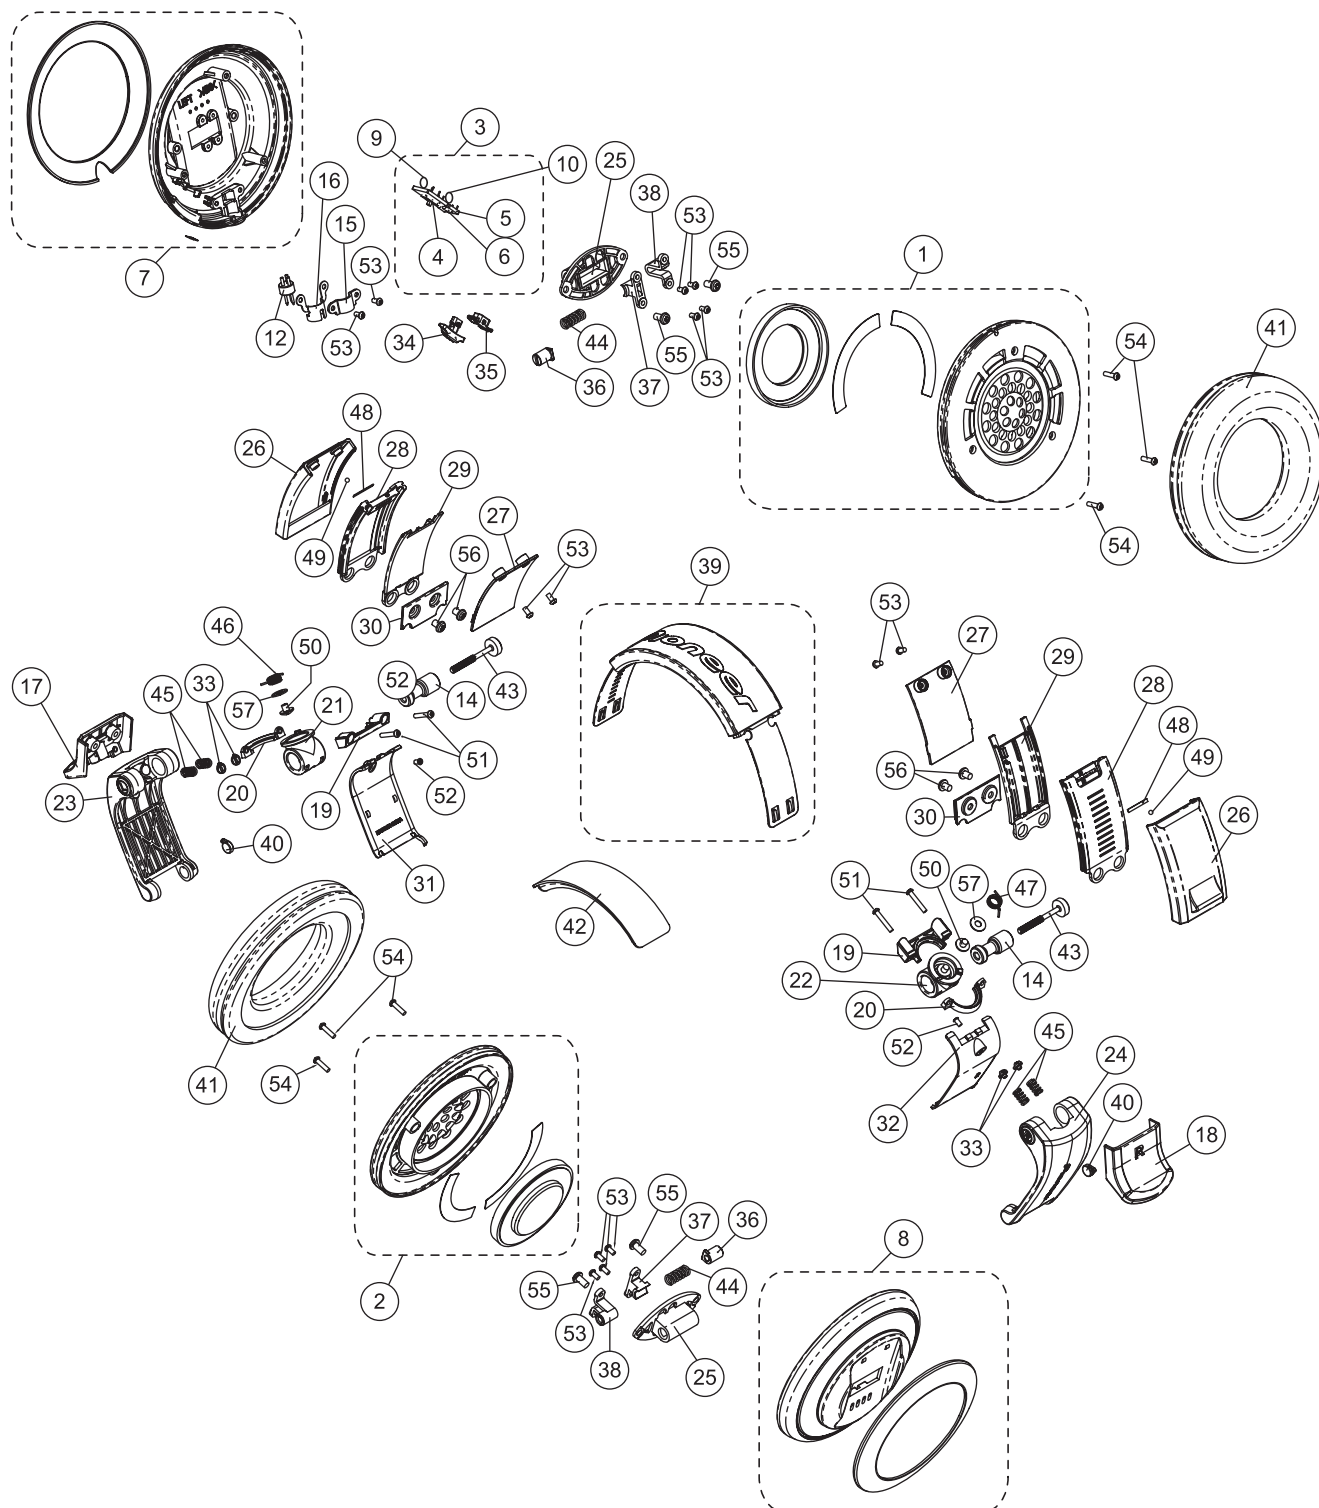


EXPLODED VIEWS Parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	1..SP Unit ASSY L	WXX1386	24	Hanger R	WNH1013
NSP	2..Speaker	WWW1089	25	Case Holder	WNH1014
NSP	2..Base L	WNK2902	26	Slider	WNK2892
NSP	2..Dumper	WER1142	27	Slider Cover	WNK2893
			28	Inner Slider A	WNK2894
2	1..SP Unit ASSY R	WXX1387	29	Inner Slider B	WNK2895
NSP	2..Speaker	WWW1089	30	Cap Cover	WNK2896
NSP	2..Base R	WNK2903	31	Hanger Cover L	WNK2897
NSP	2..Dumper	WER1142	32	Hanger Cover R	WNK2898
			33	Click Plate	WNK2899
3	1..Switch Board ASSY	WXX1388			
NSP	4 2..Switch	WSH1022	34	Knob	WNK2900
NSP	5 2..PC Board	WNP1079	35	Knob Holder	WNK2901
NSP	6 2..Resistance	RS1PMF4R7	36	Click Shaft	WNK2906
			37	Clamper Cover	WNK2907
7	1..Case ASSY L	WXX1389	38	Clamper	WNK2908
NSP	2..Ring L	WNA1168			
NSP	2..Case L	WNA1168	39	1..Head Band	WNK2909
NSP	2..Switch Label	WAN1096	NSP	2..Cord	WDC1088
			NSP	2..Bandplate	WNA1166
8	1..Case R ASSY	WXX1390	40	Hanger Cap	WNK2938
NSP	2..Ring R	WNA1169	41	Ear Pad	WNV1142
NSP	2..Case R	WNA1169			
NSP	9 Cord	WDC1087	42	Head Band Cushion	WNV1144
NSP	10 Cord	WDC1089	43	Bolt	WBA1012
11	-----		44	Spring	WBH1057
12	Jack	WKN1025	45	Spring	WBH1058
13	-----		46	Spring L	WBH1059
14	Shaft	WLA1034	47	Spring R	WBH1060
15	Plug Holder	WNA1167	48	Plate Spring	WBK1016
16	Stopper Ring	WNA1170	49	Steel Ball	WET1027
17	Cap L	WNH1006	50	Screw	BMZ30P030FCC
18	Cap R	WNH1007	51	Screw	PMZ20P120FTB
19	Stopper A	WNH1008	52	Screw	JFZ20P035FTB
20	Stopper B	WNH1009	53	Screw	PPZ20P040FTB
21	Joint L	WNH1010	54	Hexagon Socket Screw	PPZ20P080FTB
22	Joint R	WNH1011	55	Connector Screw	PPZ30P060FTB
23	Hanger L	WNH1012	56	Screw	BMZ30P040FTB
			57	Washer	WB30FTC

Disassembly Procedures

How to disassemble the hanger cover

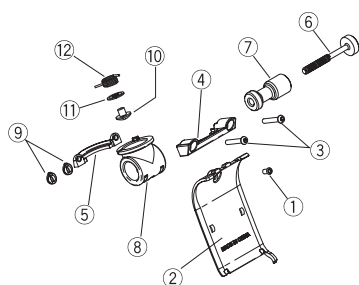

① Screw → ② Hanger Cover L → ③ Screw → ④ Stopper A →
 ⑤ Stopper B → ⑥ Bolt → ⑦ Shaft → ⑧ Joint L → ⑨ Click Plate →
 ⑩ Screw → ⑪ Washer → ⑫ Spring L



After the bolt ⑥ is removed




The shaft ⑦ can be easily removed if you slide it by holding the point shown in the above photo pressed.



Note:
 As both ends (the thicker parts) of the shaft will serve as axes of rotation, be careful NOT to damage them. Some scratches in the constricted middle part may be tolerable.

How to disassemble the case holder

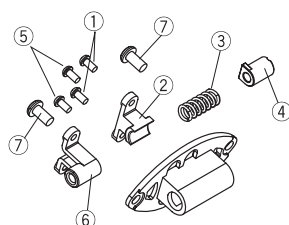

① Screw → ② Clamper Cover → ③ Spring → ④ Click Shaft →
 ⑤ Screw → ⑥ Clamper → ⑦ Connector Screw



To remove the spring ③, bend it as shown in these photos.