9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

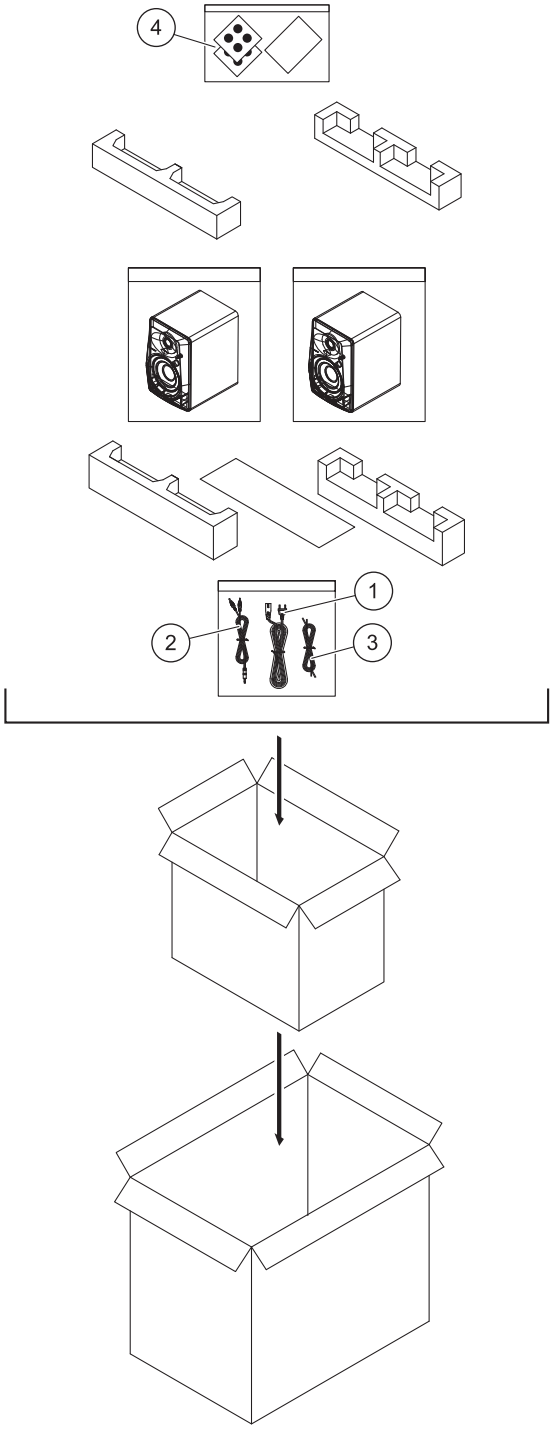

PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
⚠	1	POWER CORD	
		(CMXEG)	170403000085
		(SYXEG)	170403000094
	2	RCA-MINI CABLE	170303000100
	3	SPEAKER CORD	WR2000000010
	4	BOTTOM CUSHION	GK0048H00005

9.2 EXTERIOR SECTION
9.2.1 SPEAKER LEFT

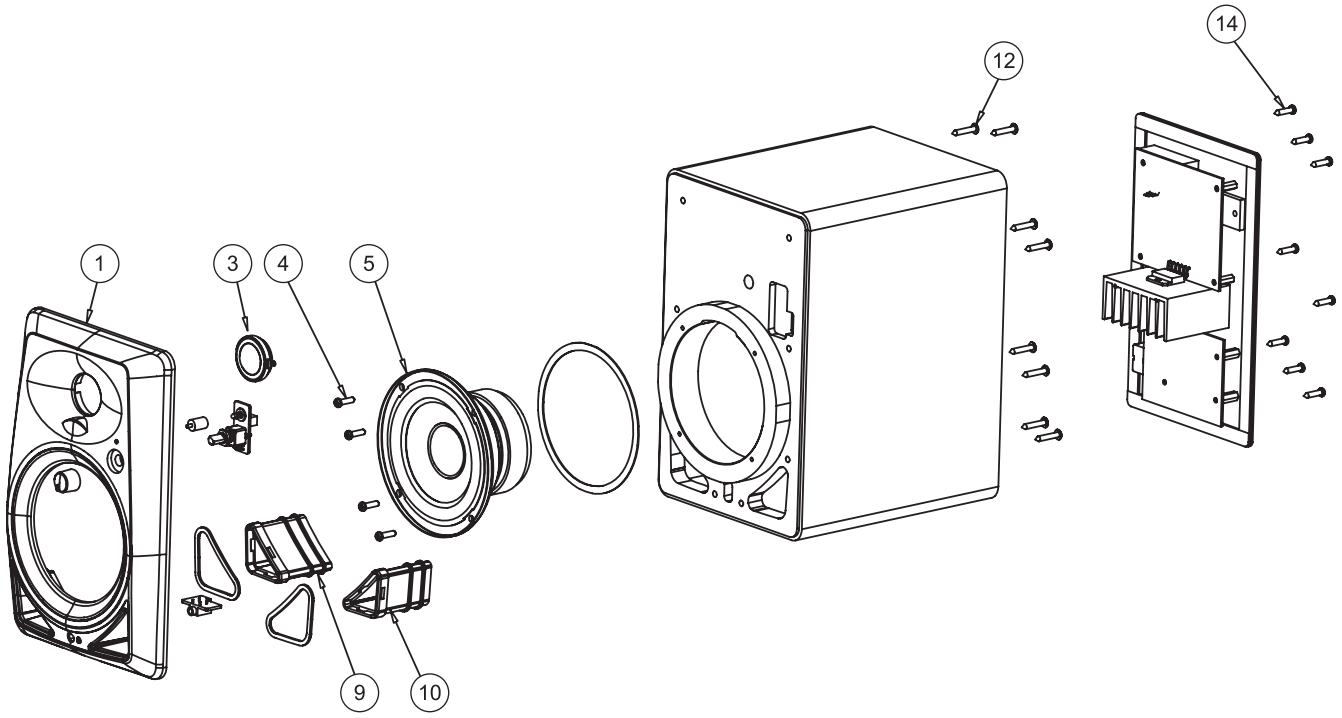

EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.
1	FRONT PANEL L	BF0400000144
2	----------	
3	TWEETER	YW20C06N0080
4	SCREW	LS0290000501
5	WOOFER	YF0402000205
6	----------	
7	----------	
8	----------	
9	PORT R	AT0340460002
10	PORT L	AT0340460001
11	----------	
12	SCREW	LS0290000170
13	----------	
14	SCREW	LS0290000501

9.2.2 SPEAKER RIGHT

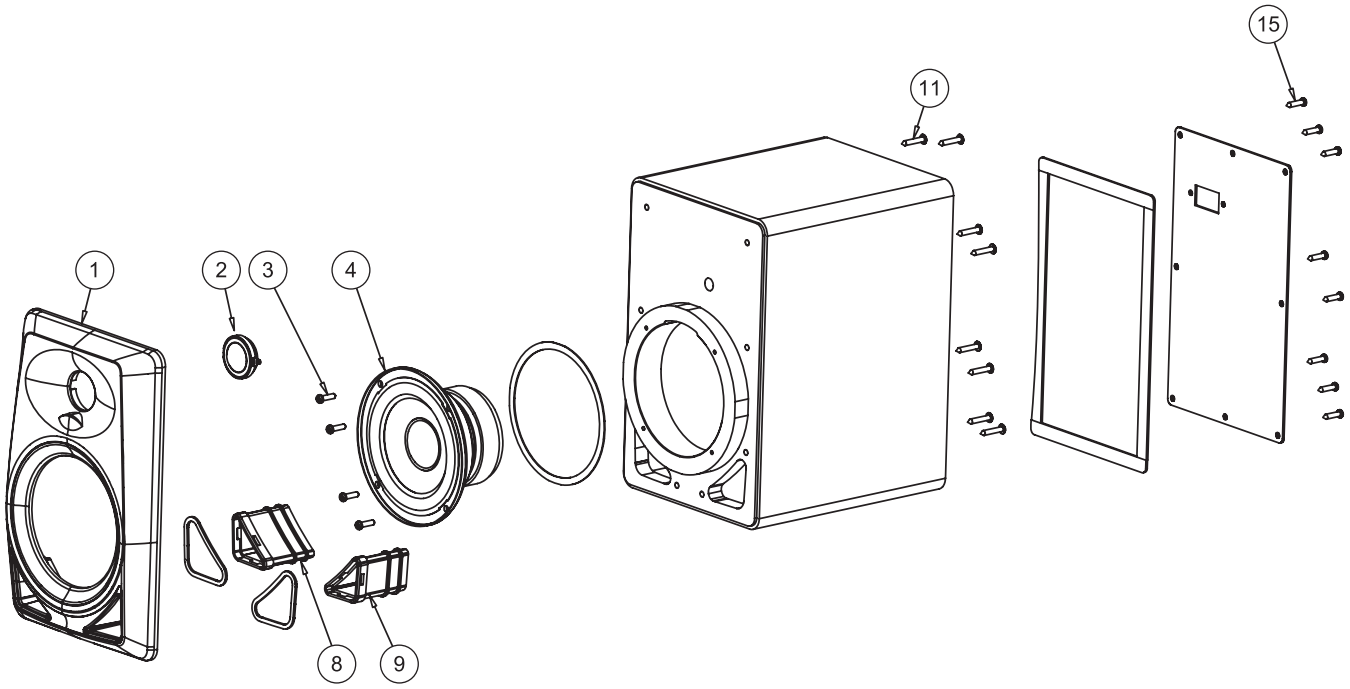

EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	FRONT PANEL R	BF0400000143
	2	TWEETER	YW20C06N0080
	3	SCREW	LS0290000501
	4	WOOFER	YF0402000205
	5	----------	
	6	----------	
	7	----------	
	8	PORT R	AT0340460002
	9	PORT L	AT0340460001
	10	----------	
	11	SCREW	LS0290000170
	12	----------	
	13	----------	
	14	----------	
	15	SCREW	LS0290000501