9.2 BOTTOM SECTION

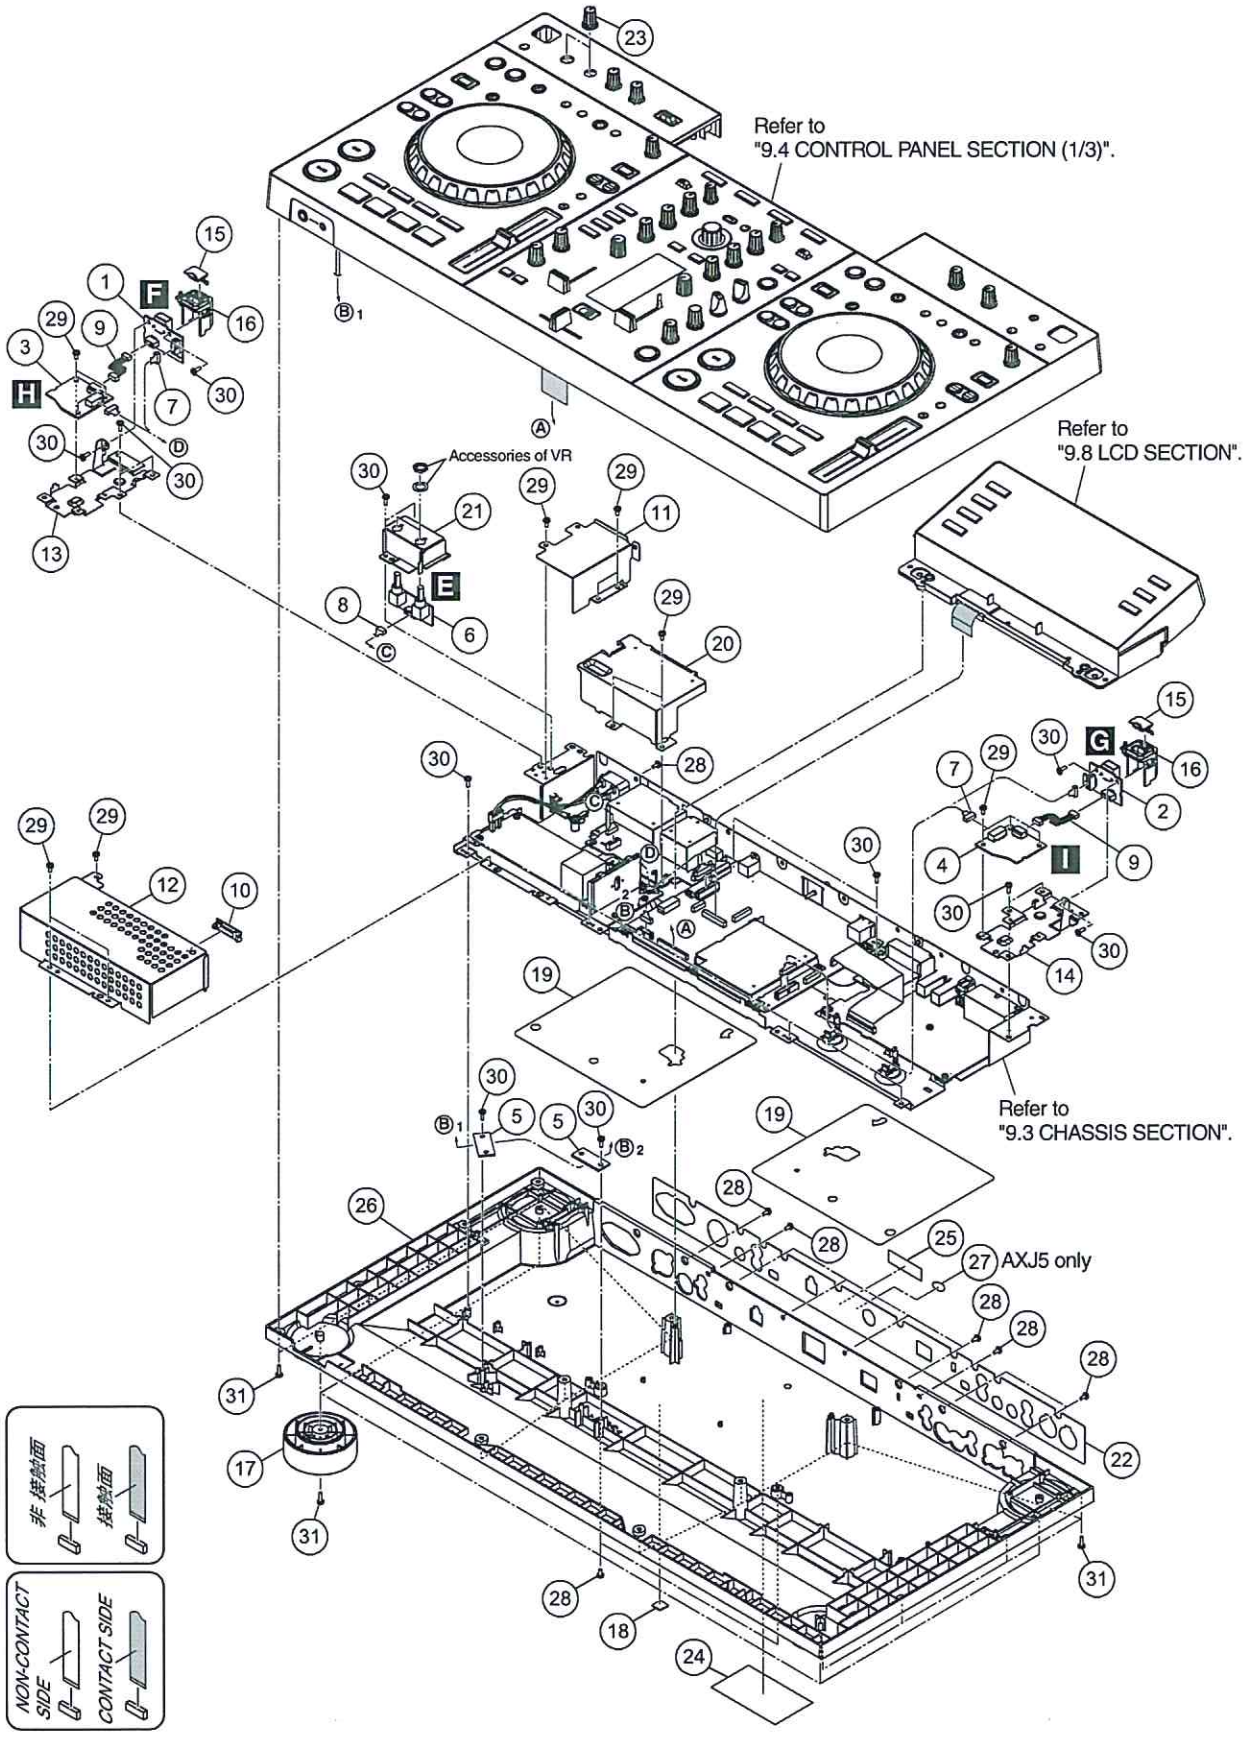

(1) BOTTOM SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	USB1 Assy	DWX3620
	2	USB2 Assy	DWX3621
	3	USBP1 Assy	DWX3636
	4	USBP2 Assy	DWX3637
	5	HLD3 Assy	DWX3647
	6	MICT Assy	DWX3623
	7	Shielded Conn-Cable	DDA1050
	8	Shielded Conn-Cable	DDA1051
	9	Connector Assy	PF04PP-C05
	10	Guard/EDG	DEC3580
	11	Shield Case/AC	DNH3184
	12	Shield Case	DNH3202
	13	Stay/US1	DNH3192
	14	Stay/US2	DNH3194
	15	Cover/USB	DNK6041
	16	Holder/USB	DNK6390
	17	Insulator Assy	DXB2131
	18	Rubber Foot	VEB1349
	19	Shield Plate	DNH3204
	20	Shield Case	DNH3203
	21	Stay	DNH3205
	22	Rear Panel	See Contast table (2)
	23	Knob/LBK	DAA1284
NSP	24	Label/SY	DRW2637
NSP	25	Serial Label (UPC)	DRW2311
	26	Chassis	DNK6387
NSP	27	CCC S&E Label	See Contast table (2)
	28	Screw	BBZ30P060FTB
	29	Screw	BBZ30P060FTC
	30	Screw	BPZ30P080FNI
	31	Screw	BPZ30P100FTB

(2) CONTRAST TABLE

XDJ-RX/LSYXJ8, UXJCB and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-RX/LSYXJ8	XDJ-RX/UXJCB	XDJ-RX/AXJ5
	22	Rear Panel	DAH3030	DAH3030	DAH3027
NSP	27	CCC S&E Label	Not used	Not used	DRW2310

9.3 CHASSIS SECTION

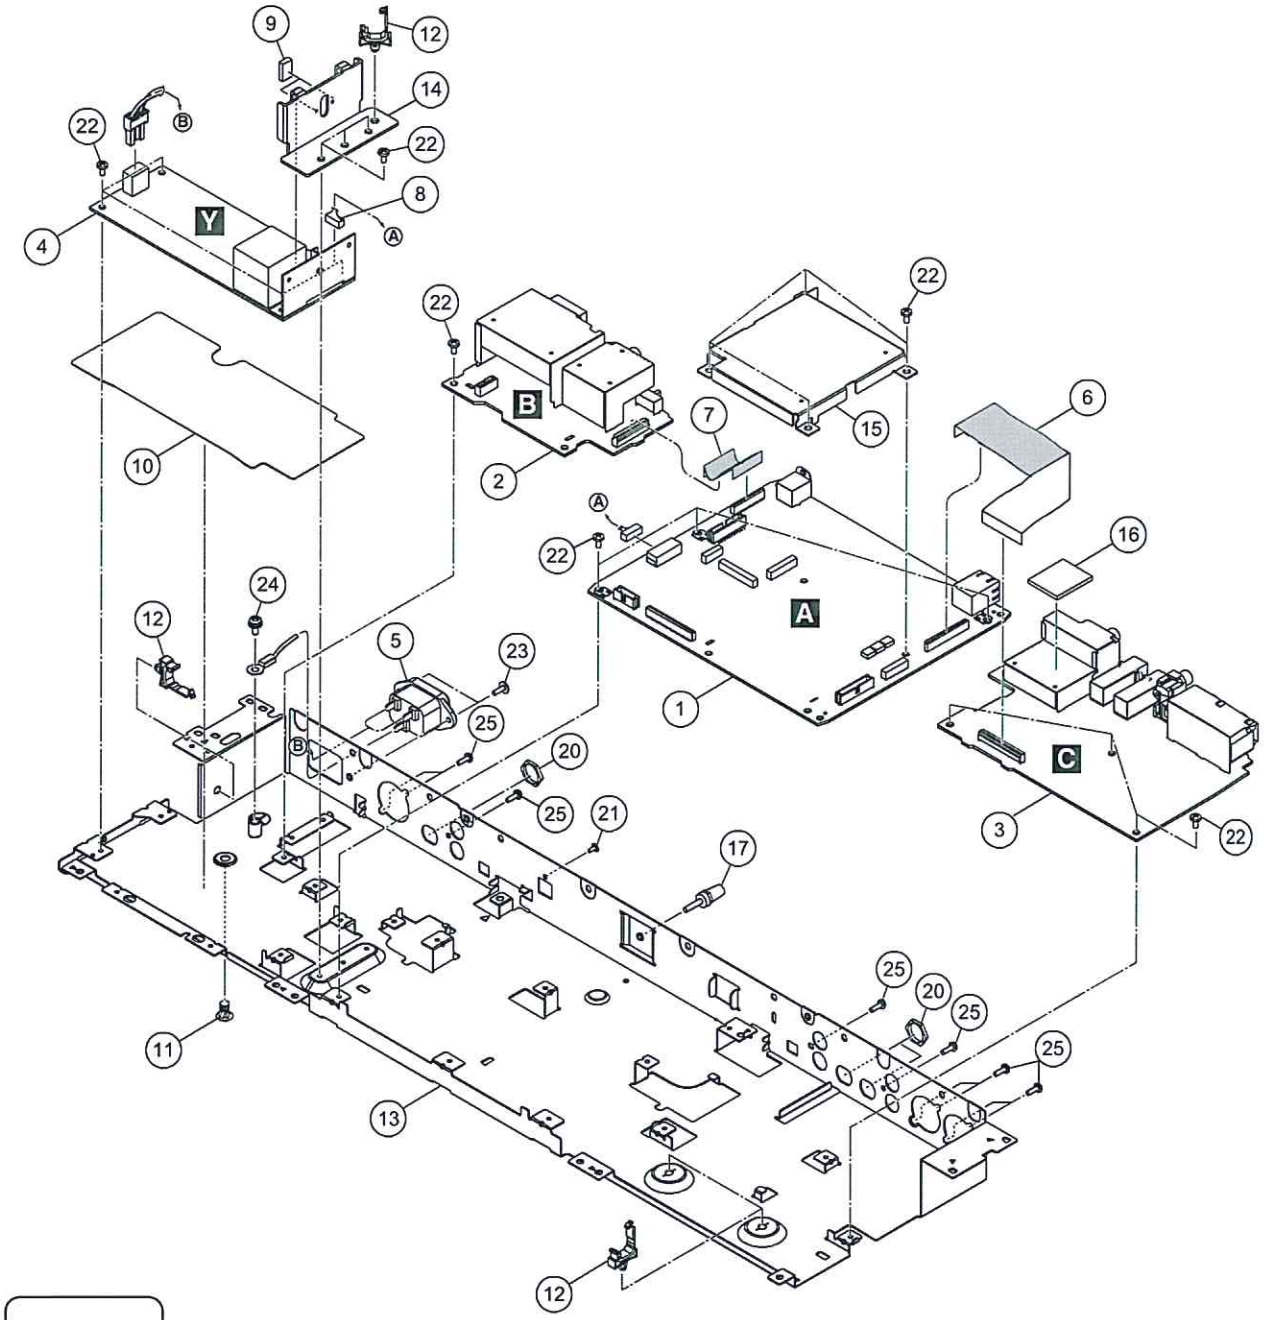

CHASSIS SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MAIN Assy	DWX3590
	2	JACK1 Assy	DWX3615
	3	JACK2 Assy	DWX3616
⚠	4	POWER SUPPLY Assy	DWR1463
⚠	5	AC Inlet/3P	DKP3961
	6	FFC/31P	DDD1685
	7	FFC	DDD1694
	8	Crimp Connector/6P	DKP3963
	9	Heat Cond Sheet	DEB2001
	10	Sheet	DEC3591
	11	Spacer/PCB	DEC3574
	12	Cord Clamper	DEC3579
	13	Stay/PCB	DNH3183
	14	Heat Sink/AL	DNH3195
	15	Shield Case/MAI	DNH3181
	16	Cushion	DEC3592
	17	Terminal Screw	AKE-031
	18	•••••	
	19	•••••	
	20	Nut (M12)	NKX2FNI
	21	Screw (M3*5)	DBA1340
	22	Screw	BBZ30P060FTC
	23	Screw	IBZ30P080FTB
	24	Screw	PMH40P080FTC
	25	Screw	PPZ30P080FTB

9.4 CONTROL PANEL SECTION (1/3)

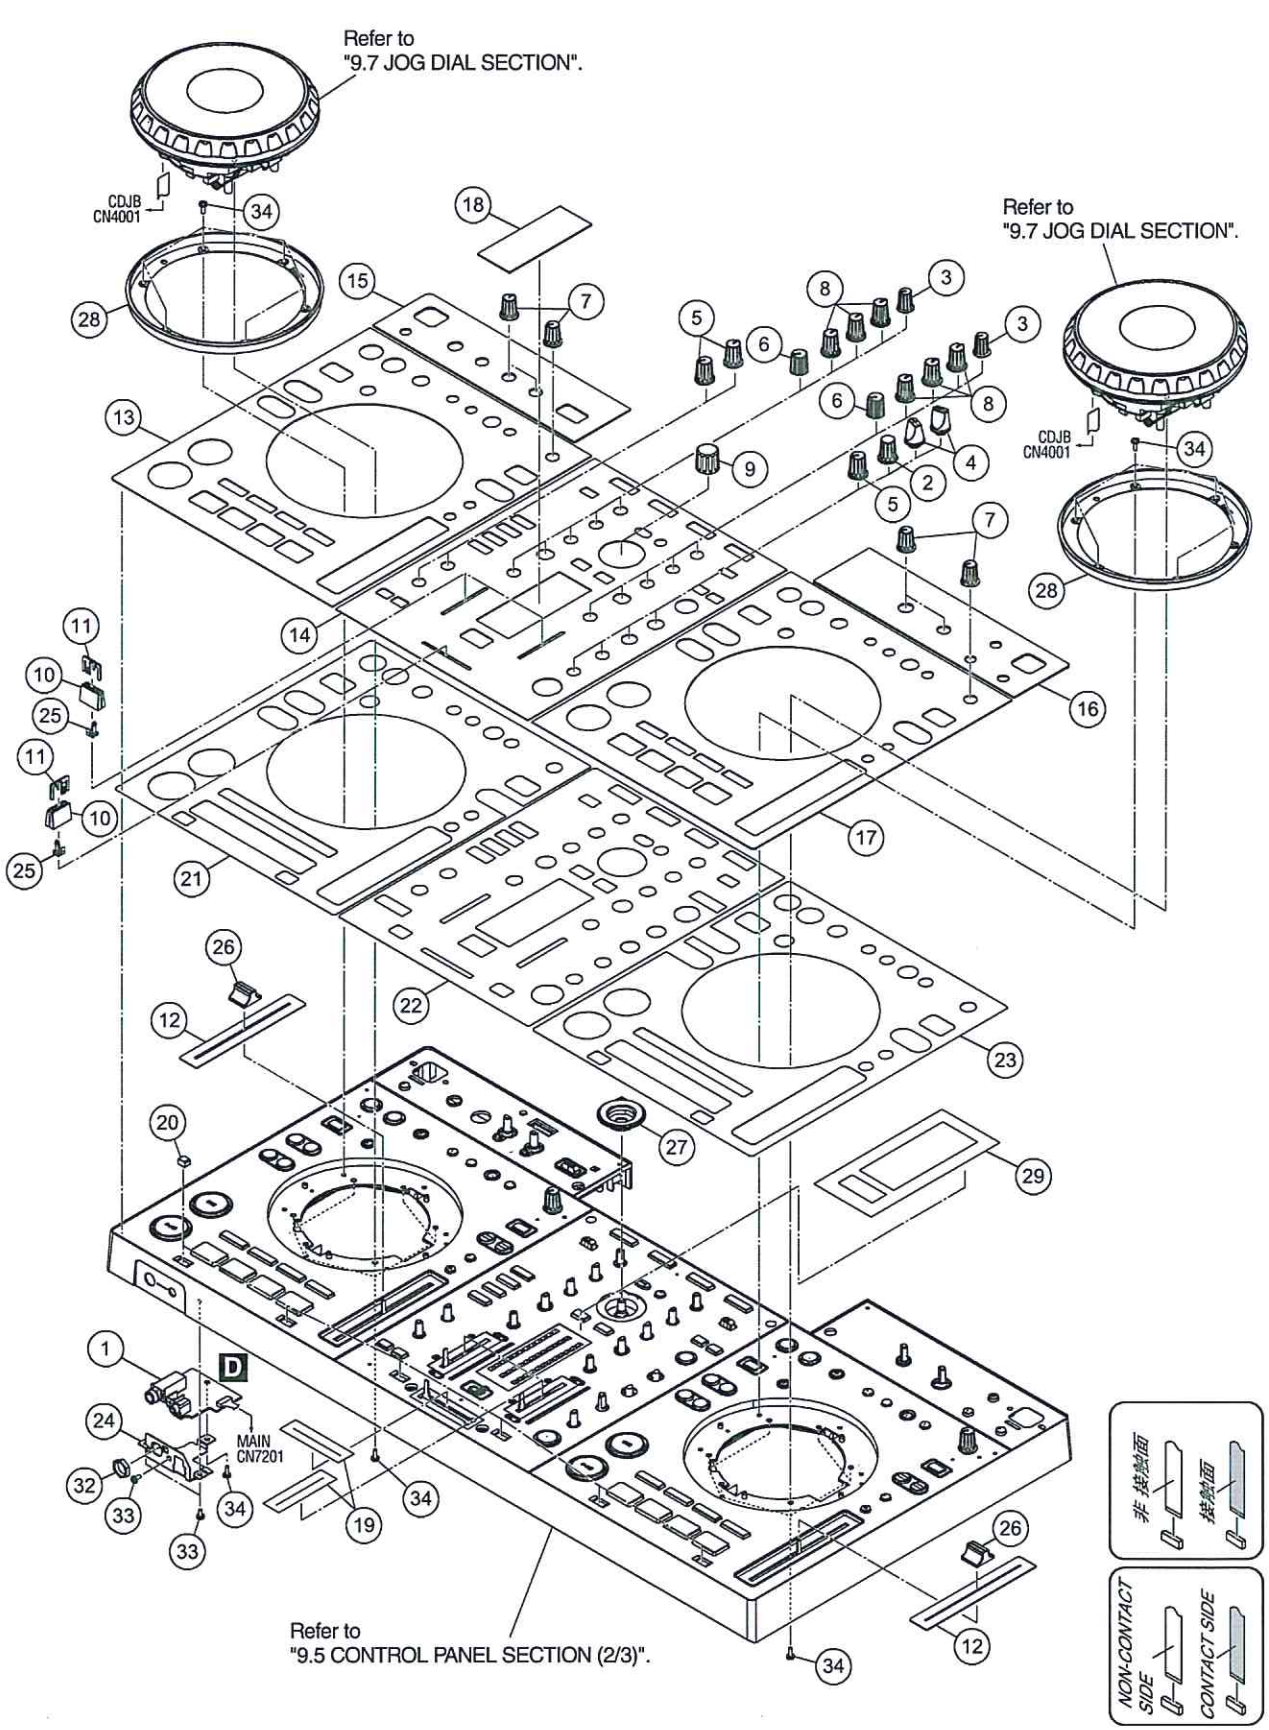

CONTROL PANEL SECTION (1/3) SECTION PARTS LIST

Mark No.	Description	Part No.
1	HPJB Assy	DWX3633
2	Rotary SW Knob (C)	DAA1180
3	Rotary SW Knob S (C)	DAA1204
4	FX SEL Knob	DAA1213
5	Rotary Knob (BN)	DAA1220
6	Knob/CL	DAA1320
7	Knob/LBK	DAA1284
8	Knob/RSW	DAA1305
9	Knob/BRS	DAA1342
10	Slider Knob 1	DAC2684
11	Slider Knob 2	DAC2685
12	Slide Sheet 1C	DAH2404
13	Plate/DC1	DAH3009
14	Plate/MIX	DAH3010
15	Panel/PM1	DAH3011
16	Panel/PM2	DAH3012
17	Plate/DC2	DAH3014
18	Panel/LVL	DAH3016
19	Fader Packing	DEC3355
20	Gasket/JOG	DEC3562
21	DS Tape/DC1	DEH1061
22	DS Tape/MIX	DEH1062
23	DS Tape/DC2	DEH1063
24	Stay/HP	DNH3182
25	Slider Knob Stopper	DNK5888
26	Knob/SLD	DNK5981
27	Ring/BRS	DNK6312
28	Ring/JOG	DNK6396
29	DS Tape	DEH1066
30	•••••	
31	•••••	
32	Nut M12	DBN1018
33	Screw	BBZ30P060FTC
34	Screw	BPZ30P080FNI

9.5 CONTROL PANEL SECTION (2/3)

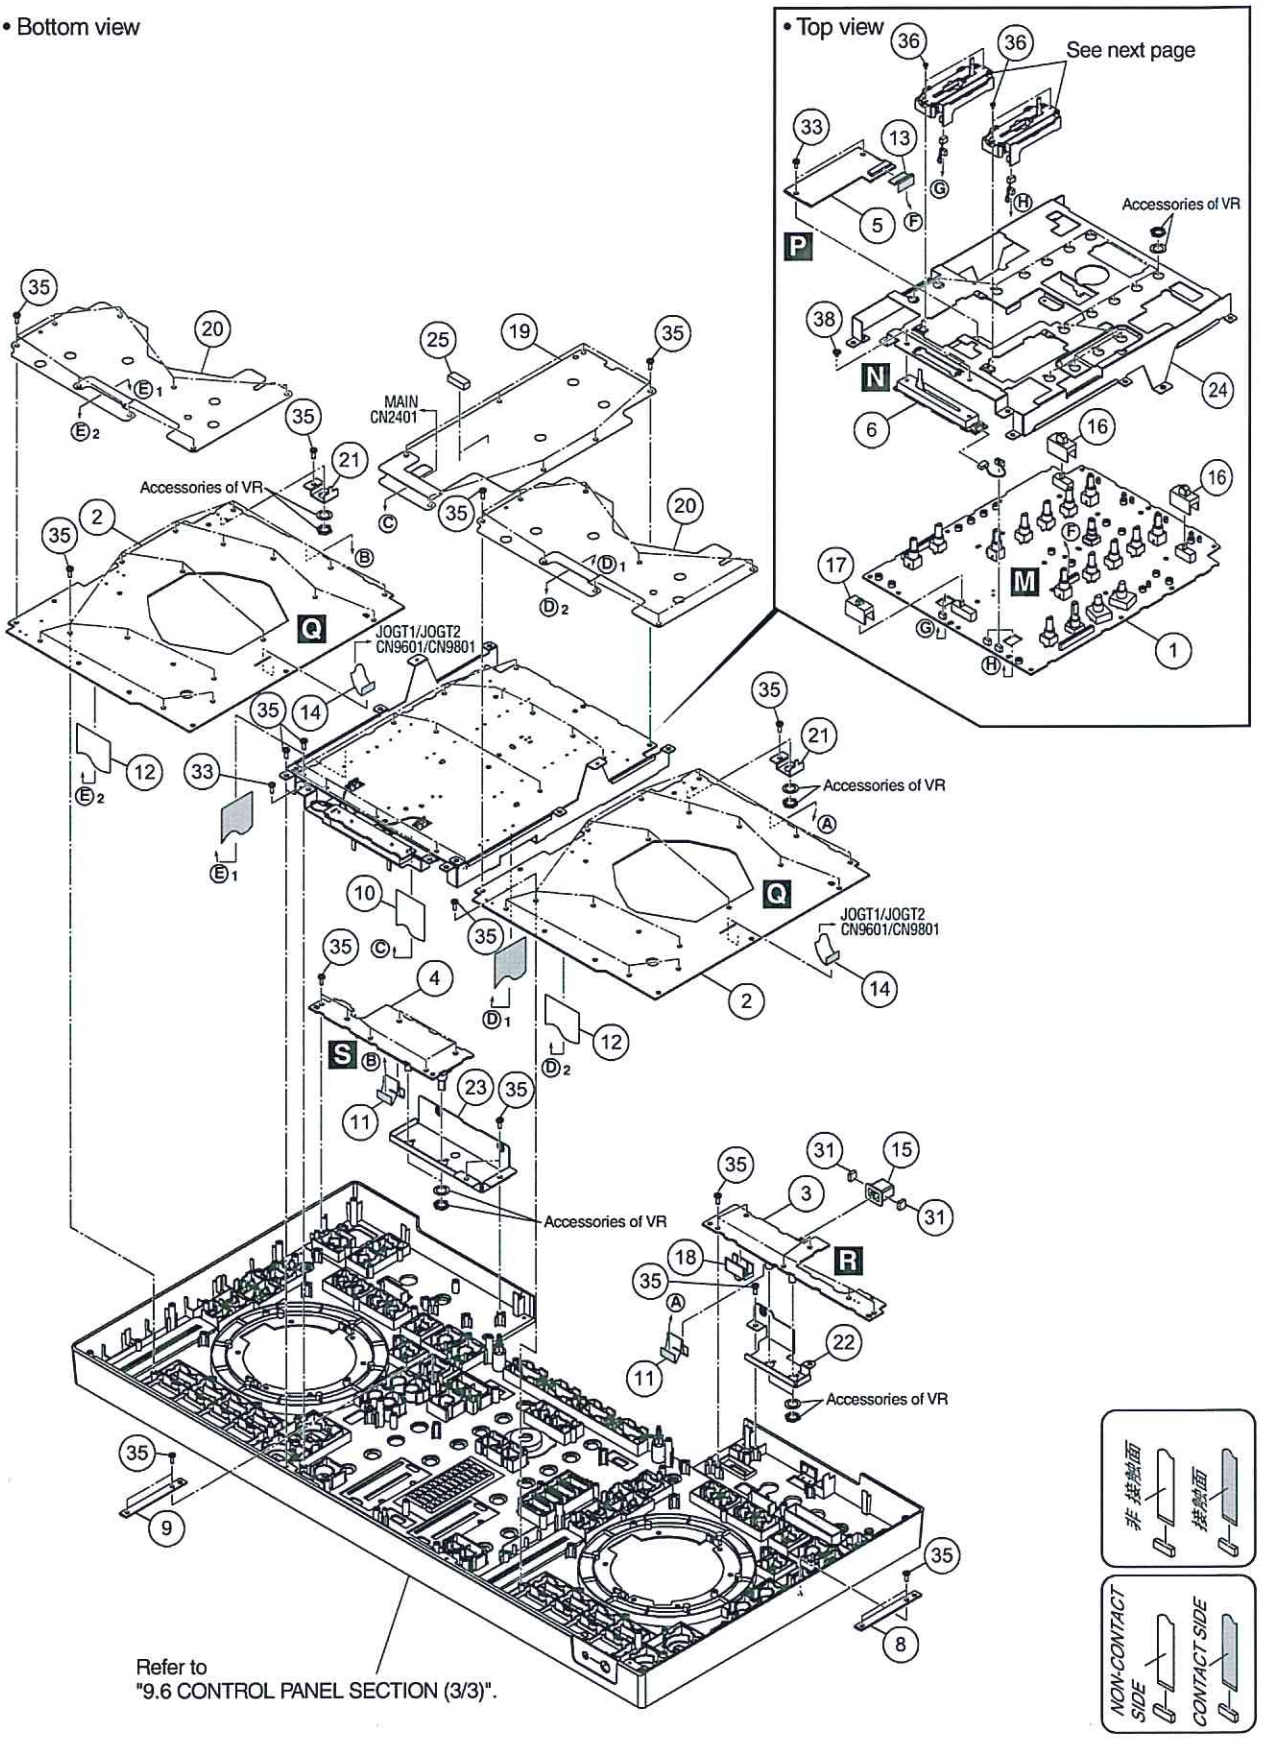

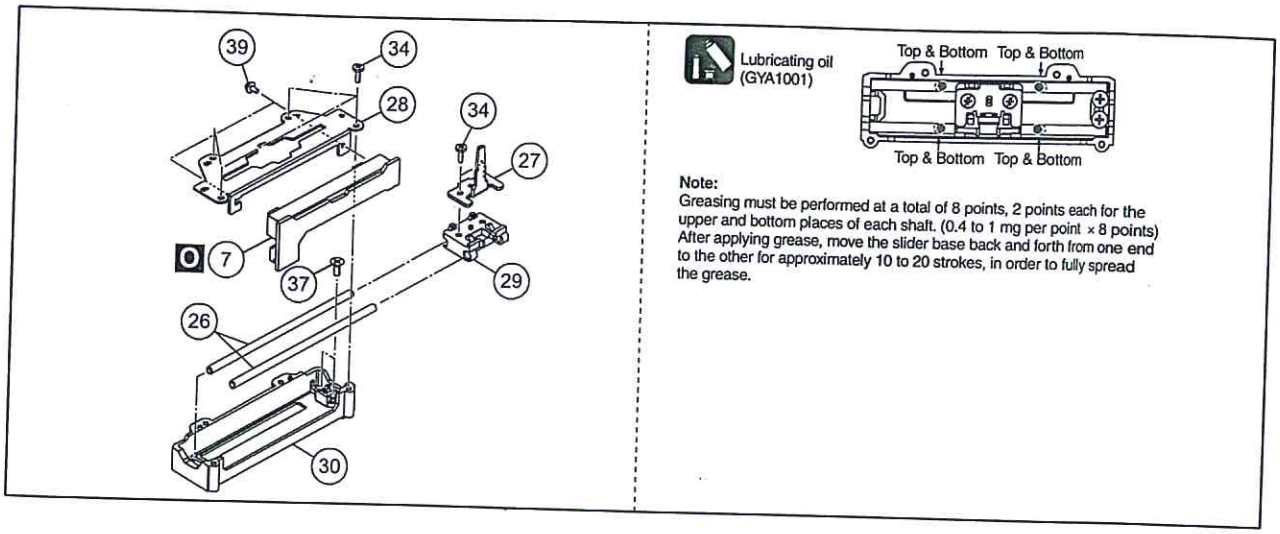

CONTROL PANEL SECTION (2/3) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MIXB Assy	DWX3613
	2	CDJB Assy	DWX3614
	3	PNL1 Assy	DWX3628
	4	PNL2 Assy	DWX3629
	5	LLED Assy	DWX3638
	6	CRFB Assy	DWX3626
	7	CHF1 Assy	DWX3624
	8	HLD1 Assy	DWX3645
	9	HLD2 Assy	DWX3646
	10	FFC/35P	DDD1683
	11	FFC/17P	DDD1684
	12	FFC/39P	DDD1687
	13	FFC/19P	DDD1689
	14	FFC/15P	DDD1691
	15	Power Knob	DAC2306
	16	Slide SW Cap	DAC2400
	17	Slide SW Cap (W)	DAC2401
	18	SW Cap	DAC2753
	19	Barrier/1	DEC3563
	20	Barrier/2	DEC3572
	21	VR Stay S	DNH2964
	22	Stay/MC2	DNH3189
	23	Stay/MST	DNH3190
	24	Stay/VR	DNH3191
	25	FFC Cushion	DEC3248
NSP	26	Guide Shaft (S)	DLA1918
	27	Lever Plate	DNH2954
	28	VR Stay	DNH2955
	29	Slider Base	DNK5851
	30	Shaft Holder	DNK5852
	31	Insulation Sheet	DEC3594
	32	•••••	
	33	Screw	BBZ30P060FTC
	34	Screw	BPZ20P060FTC
	35	Screw	BPZ30P080FNI
	36	Screw	BSZ20P040FTB
	37	Screw	CPZ26P080FTC
	38	Screw	IMZ30P040FTC
	39	Screw	PMH20P040FTC

9.6 CONTROL PANEL SECTION (3/3)

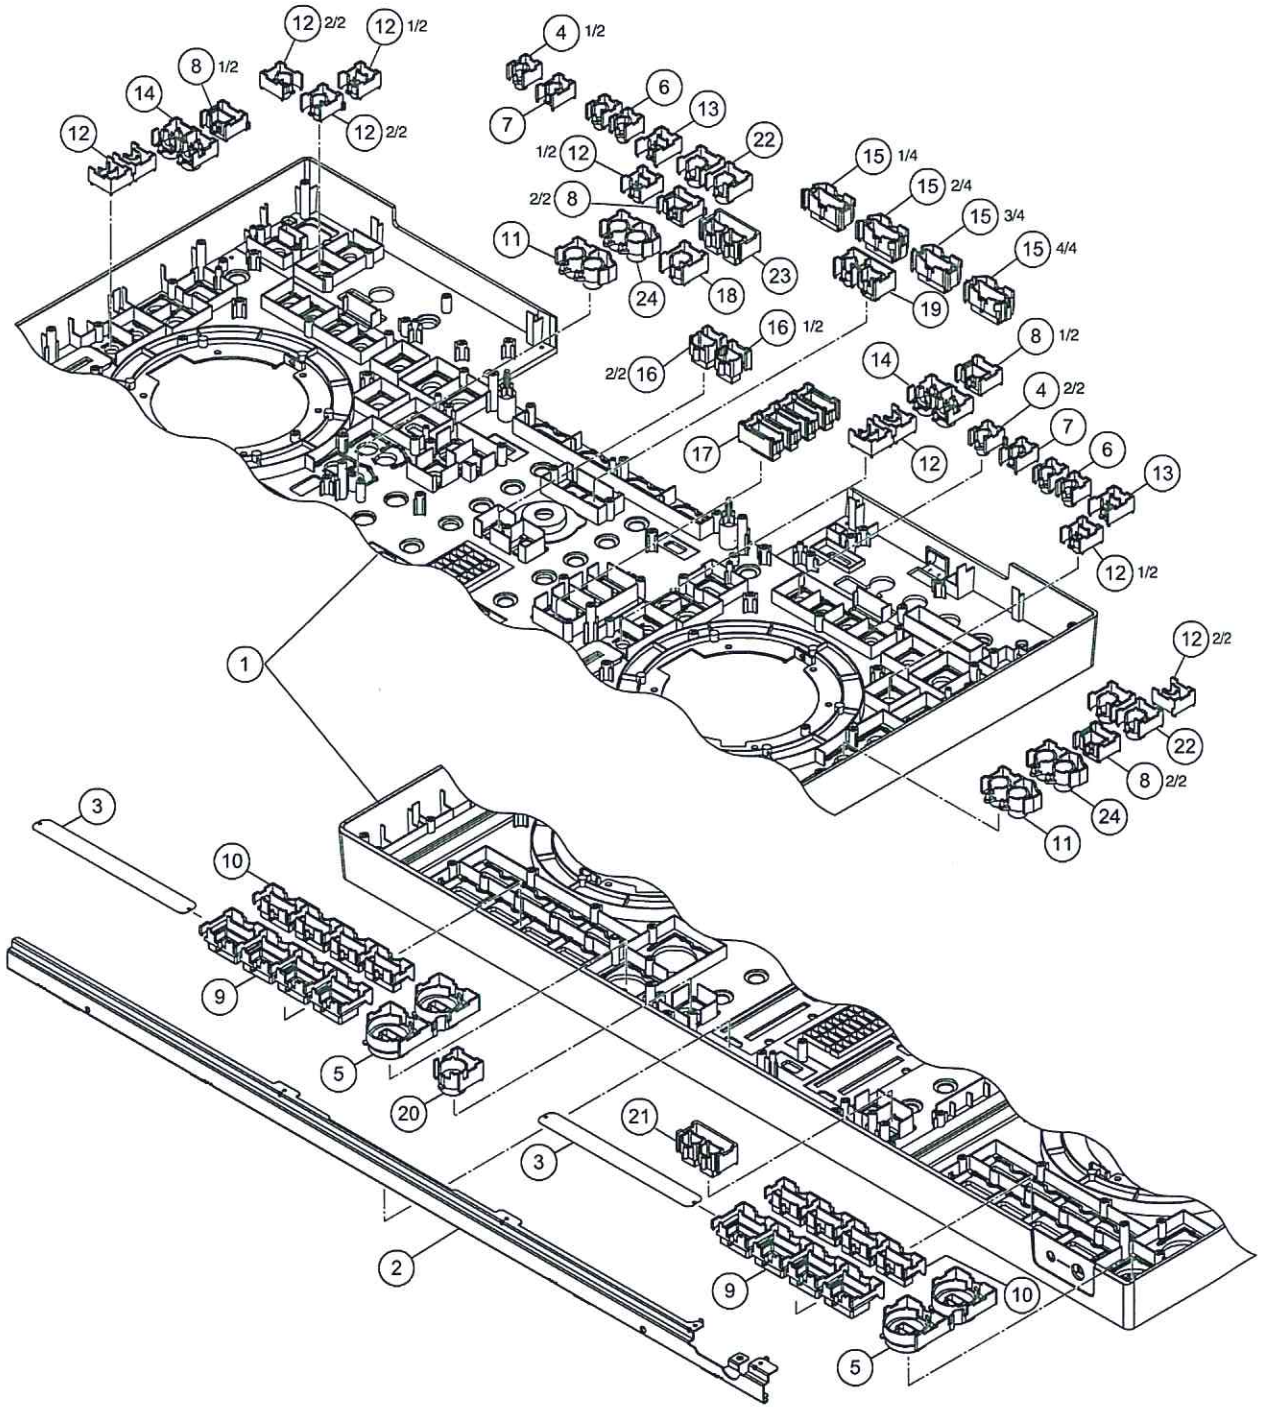

CONTROL PANEL SECTION (3/3) SECTION PARTS LIST

Mark No.	Description	Part No.
1	Control Panel	DNK6393
2	Frame/FRT	DNH3187
3	Diffuser/BTN	DEC3582
4	Button/TMP	DAC2845
5	Button/PLY	DAC3018
6	Button/CAL	DAC3020
7	Button/DLT	DAC3021
8	Button/RVL	DAC3023
9	Button/HC	DAC3026
10	Button/SEL	DAC3027
11	Button/SRC	DAC3028
12	Button/MT	DAC3029
13	Button/REL	DAC3030
14	Button/SYN	DAC3032
15	Button/MOD	DAC3035
16	Button/LOD	DAC3036
17	Button/COL	DAC3037
18	Button/TAP	DAC3038
19	Button/BAC	DAC3039
20	Button/EF	DAC3040
21	Button/HPC	DAC3073
22	Button/LOP	DAC3074
23	Button/BEF	DAC3075
24	Button/TSR	DAC3076

9.7 JOG DIAL SECTION

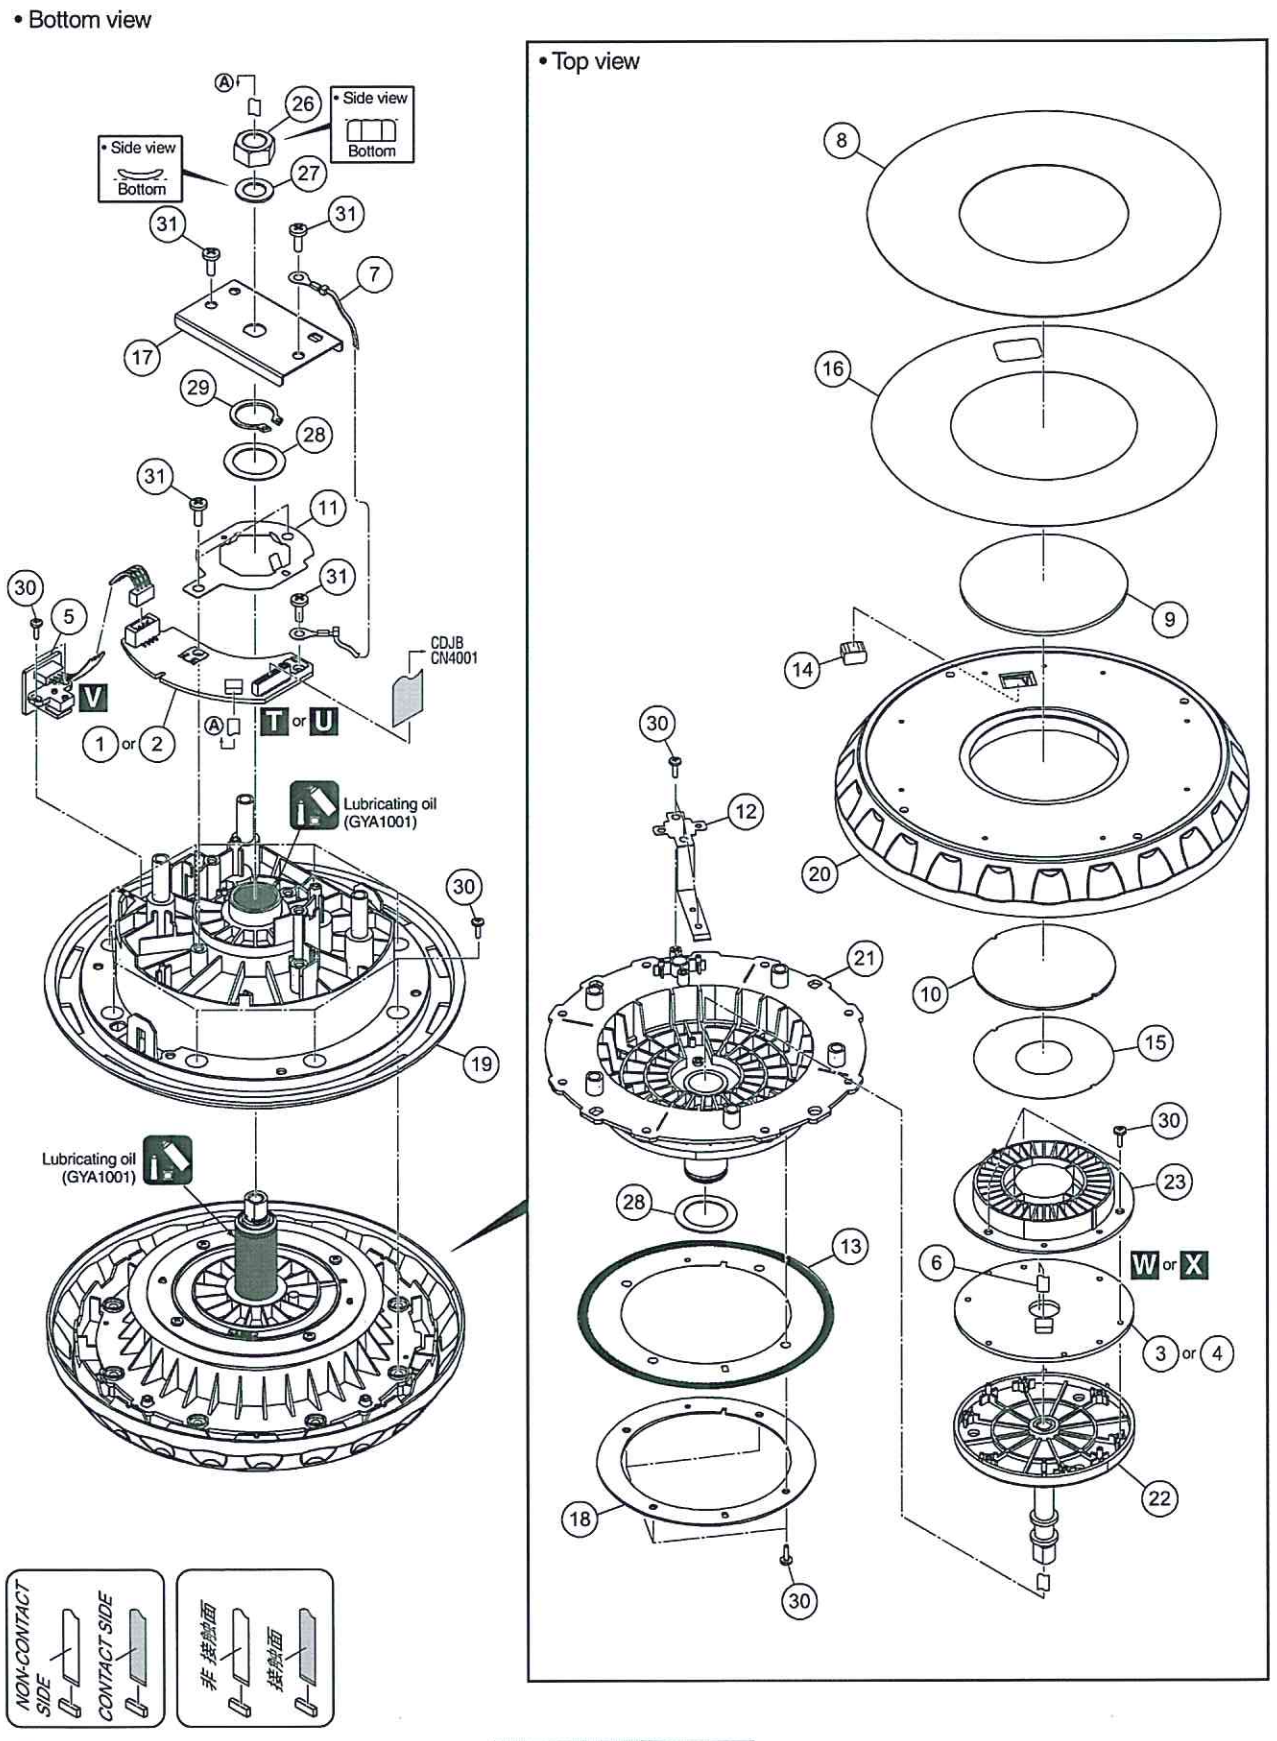

JOG DIAL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	JOGT1 Assy	DWX3618
	2	JOGT2 Assy	DWX3631
	3	JLED1 Assy	DWX3617
	4	JLED2 Assy	DWX3630
	5	JOGR1 Assy	DWX3619
	6	FFC/6P	DDD1690
	7	Earth Lead Unit	DE005VC0
	8	Plate/JOG	DAH3002
	9	Window/JOG	DAH3003
	10	Window	DAH3004
	11	Leaf Spring/1	DBK1383
	12	Leaf Spring/2	DBK1384
	13	Slit/JOG	DEC3515
	14	Gasket/JOG	DEC3562
	15	Diffuser/LED	DEC3575
	16	DS Tape/JOG	DEH1058
	17	Stay/LED	DNH3167
	18	Bracket/SLT	DNH3168
	19	Holder/JOG	DNK6371
	20	JOG Dial/OUT	DNK6372
	21	JOG Dial/IN	DNK6373
	22	Holder/LED	DNK6374
	23	Spacer/LED	DNK6375
	24	•••••	
	25	•••••	
	26	Nut	NA80FTC
	27	Spring Washer	WN80FTC
	28	Washer	WA154D225D050
	29	Washer	YC150FAC
	30	Screw	BPZ20P060FTC
	31	Screw	BPZ30P080FNI

9.8 LCD SECTION

• Bottom view

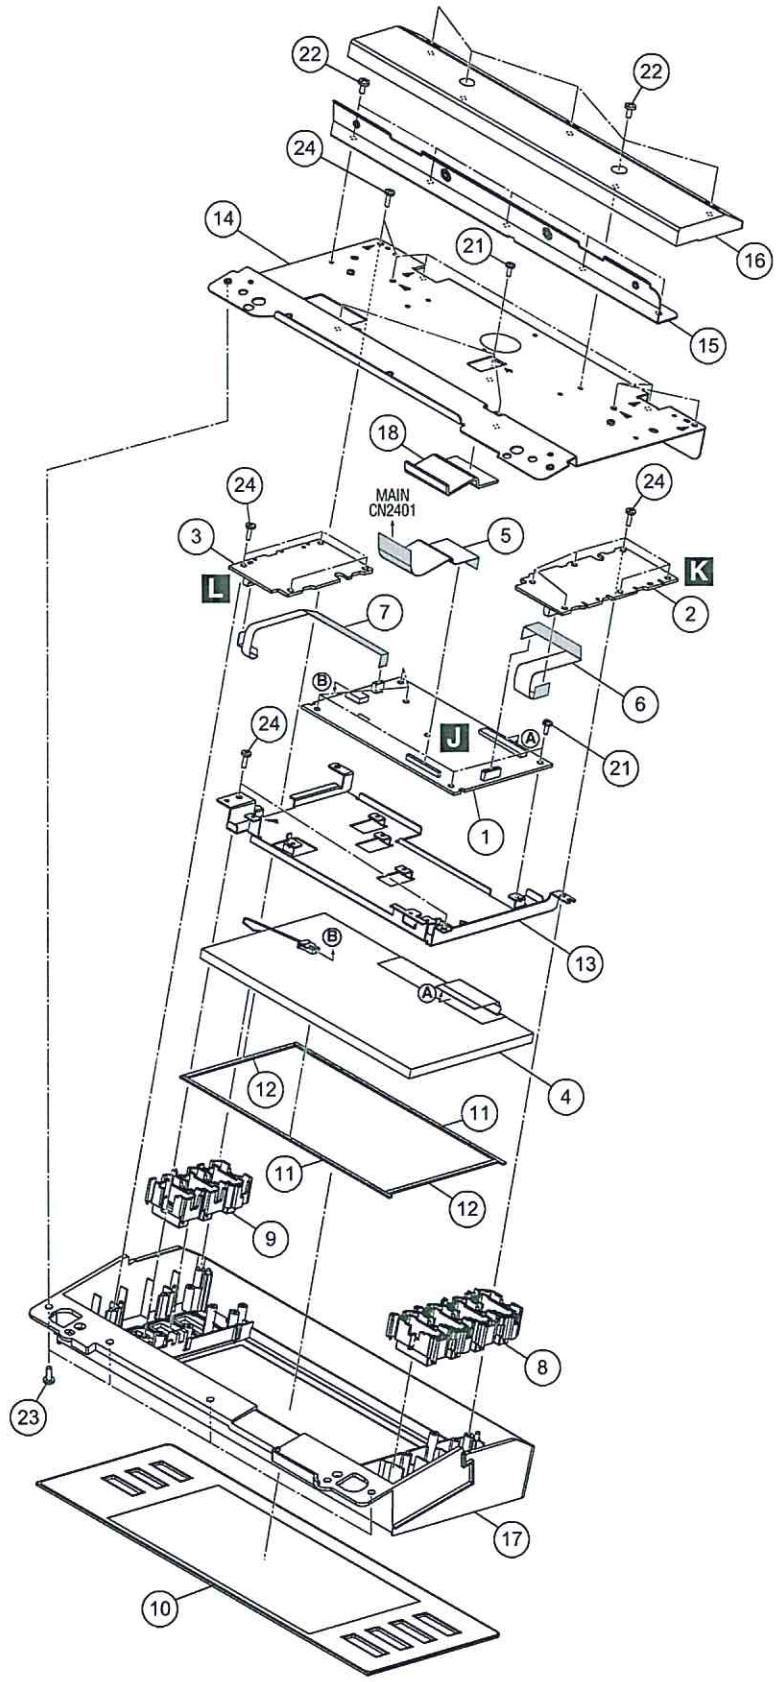

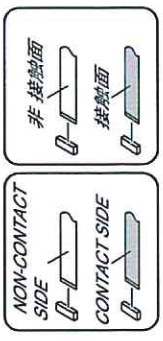

LCD SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	EXTB Assy	DWX3622
	2	DPNL1 Assy	DWX3634
	3	DPNL2 Assy	DWX3635
	4	TFT LCD	CWX4352
	5	FFC/50P	DDD1686
	6	FFC/11P	DDD1692
	7	FFC/5P	DDD1693
	8	Button/DIV	DAC3041
	9	Button/TIM	DAC3042
	10	Window/LCD	DAH3008
	11	Packing/L	DEC3568
	12	Packing/S	DEC3569
	13	Stay/LCD	DND1282
	14	Bracket/LCD	DND1283
	15	Angle/LCD	DNH3186
	16	Panel/BTM	DNK6388
	17	Panel/LCD	DNK6389
	18	Insulating Sheet/LCD	DEC3583
	19	•••••	
	20	•••••	
	21	Screw	BBZ26P060FTB
	22	Screw	BBZ30P060FTB
	23	Screw	BBZ30P080FTC
	24	Screw	BPZ26P080FTC