


4

F

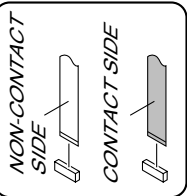

EXTERIOR SECTION parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	MAIN Assy	DWG1622	25	Earth Plate	DNH2532
⚠ 2	AC IN Assy	See Contrast table(2)	26	Bottom Plate	See Contrast table(2)
⚠ 3	TRNS Assy	See Contrast table(2)	27	Bottom Earth Plate	DNH2694
4	SECB Assy	DWR1309	28	Trans Plate	DNH2733
5	REGB Assy	DWR1310	NSP 29	Chassis	See Contrast table(2)
6	SLMB Assy	DWS1388	30	Insulator Assembly	DXA2069
7	RLYB Assy	DWX2602	31	Damper	CNV6011
8	JACK Assy	DWG1626	32	Earth Spring	DBH1398
9	• • • •		33	Float Spring (G5)	DBH1494
⚠ 10	Fuse	See Contrast table(2)	34	Front Sheet	DED1132
11	FFC (9p)	DDD1311	35	Mecha Plate	DNH2642
12	FFC (32p)	DDD1312	36	PCB Holder	DNK4524
13	FFC (25p)	DDD1313	37	Float Base 04 Assy	DXB1838
14	FFC (17p)	DDD1314	38	Laser Caution	See Contrast table(2)
15	FFC (24p)	DDD1315	NSP 39	Serial Label (UPC)	See Contrast table(2)
NSP 16	Earth Lead	DE010VF0	40	Screw	BBT30P060FCC
⚠ 17	Power Transfomer	See Contrast table(2)	41	Screw	BBZ30P060FTC
18	Connector Assy	PF03PP-B05	42	Screw	BBZ30P100FTC
19	Connector Assy	PF03PP-C12	43	Screw	BBZ40P060FTC
20	• • • •		44	Screw	BPZ30P080FTB
21	Power Knob	DAC2073	45	DM Screw (FTC)	DBA1260
NSP 22	Silicon Lubber D5 L	DEB1456	46	Screw	IPZ30P100FTC
23	Bottom Cushion S4	DEC2506			
24	Heat Sink	DNG1102			


(2) CONTRAST TABLE

CDJ-800MK2/KUCXJ, /WYXJ5 and RLFXJ types are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-800MK2/ KUCXJ	CDJ-800MK2/ WYXJ5	CDJ-800MK2/ RLFXJ
⚠	2	AC IN ASSY	DWR1430	DWR1429	DWR1432
⚠	3	TRANS ASSY	DWR1371	DWR1371	DWR1428
⚠	10	Fuse (T1.6A)	AEK7075	Not used	Not used
⚠	10	Fuse (800MA)	Not used	REK1021	REK1021
⚠	17	Power Transfomer	DTT1204	DTT1203	DTT1203
	26	Bottom Plate	DNK2689	DNK2689	DNK2691
	29	Chassis	DNK4518	DNK4517	DNK4519
	38	Laser Caution	DRW2308	DRW2308	DRW2248
NSP	39	Serial Label	DRW2311	VRW1629	VRW1629

2.3 CONTROL PANEL SECTION

A  *1 Grease: GYA1001(ZLB-PN397B)

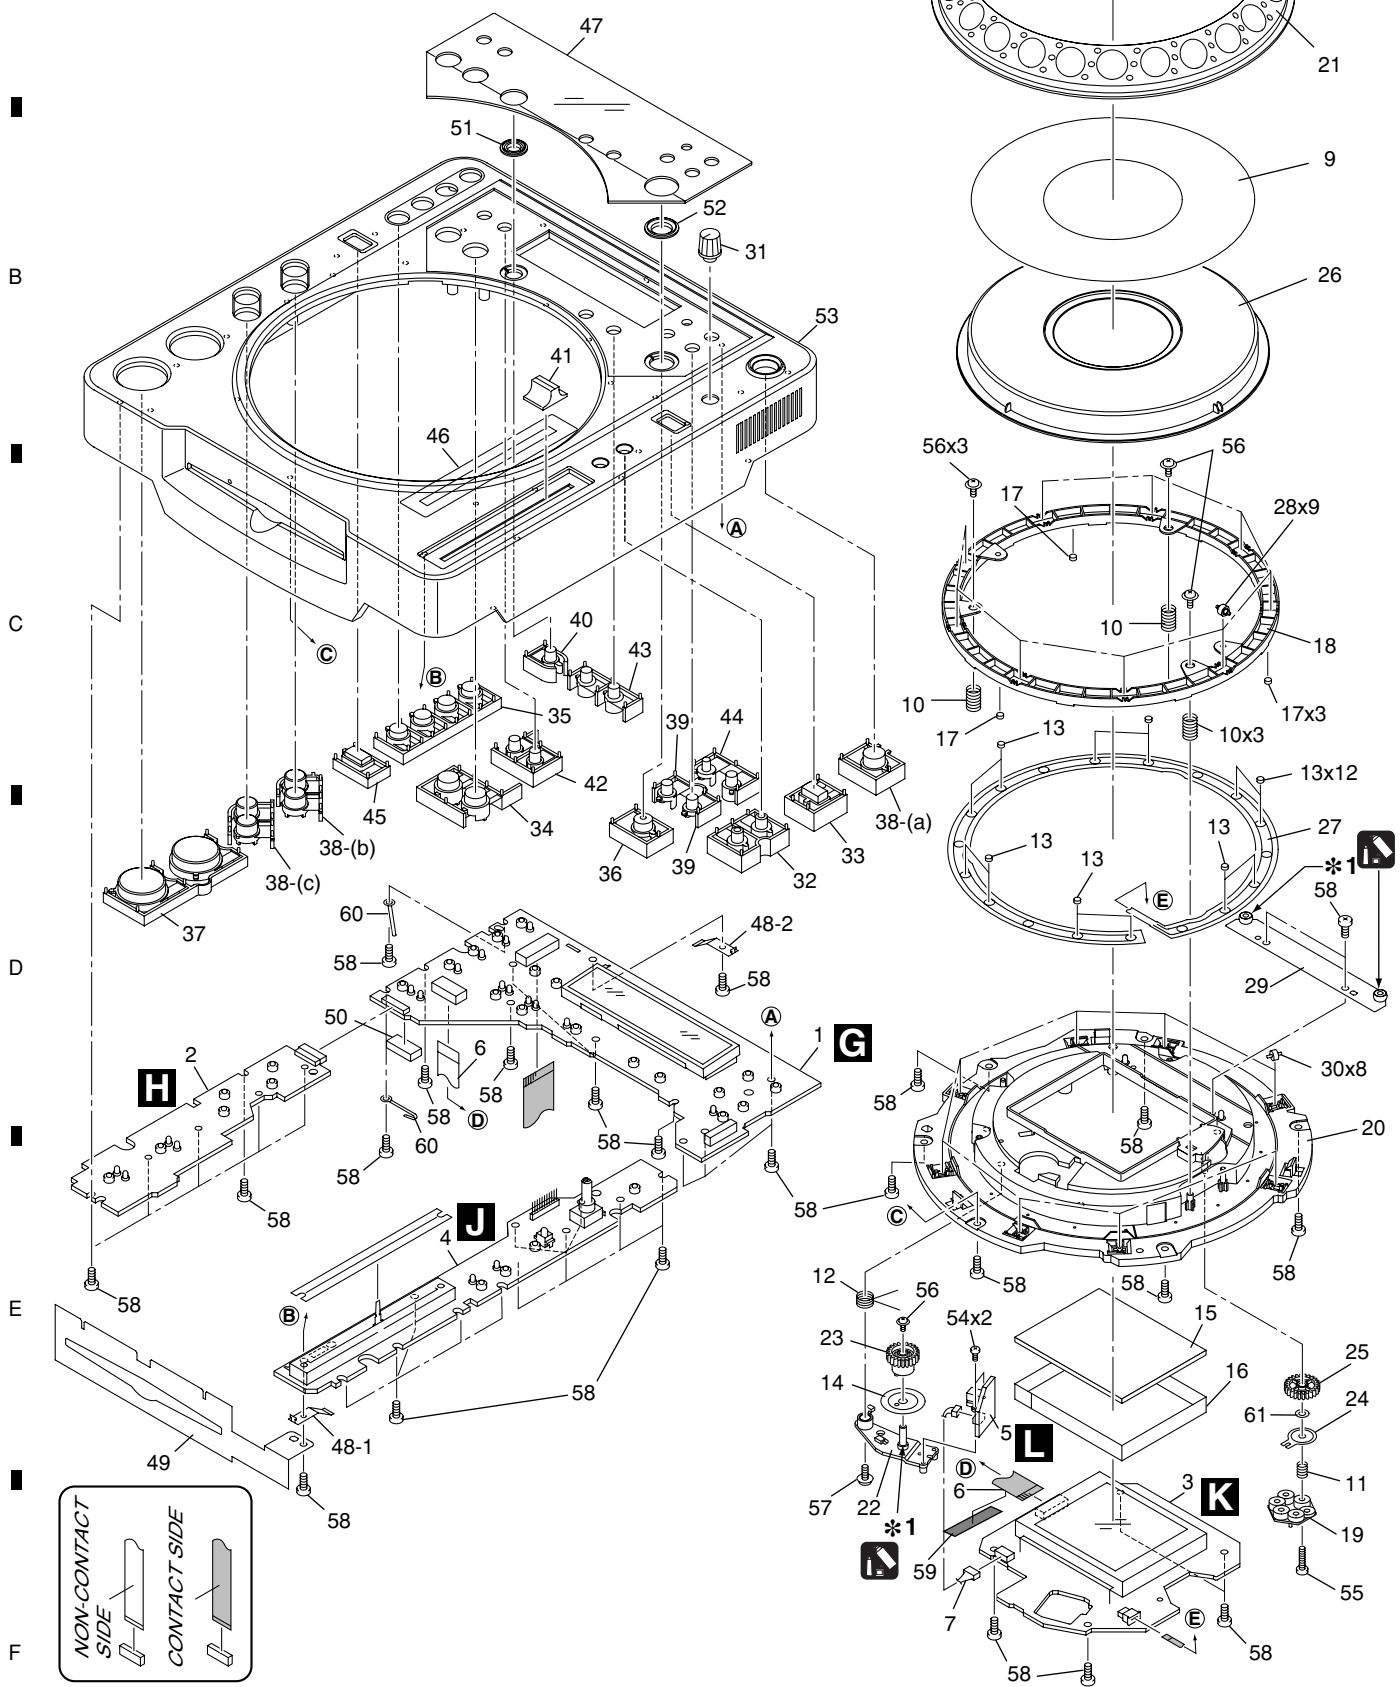

CONTROL PANEL SECTION parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	DFLB Assy	DWG1623	50	FFC Guard	DEC2586	
2	KSWB Assy	DWS1386				A
3	JFLB Assy	DWG1624	51	Reloop Guard	DNK4057	
4	SLDB Assy	DWS1387	52	Q R Guard	DNK4058	
5	JOGB Assy	DWG1625	53	Control Panel	DNK4525	
			54	Screw	BPZ20P060FTC	
6	FFC	DDD1220	55	Screw	BPZ20P100FTC	
7	Connector Assy	PF04PP-B07				
8	Jog Panel (PMMA)	DAH2182	56	Screw (FE)	DBA1265	
9	Jog Plate	DAH2438	57	Screw	IPZ30P100FTC	
10	SW spring 25	DBH1514	58	Screw	BPZ30P080FTB	
			59	Ecsane Tape (10x50)	DEC2988	
11	Gear spring 200	DBH1525	60	Cord Clamper	RNH-184-0	B
12	ARM Spring	DBH1566				
13	SW Cushion HH48/2	DEC2538	61	Washer	WA42D080D050	
14	Encorder Plate	DEC2889				
15	Protector Sheet	DEC2945				
16	FL Sheet	DEC2946				
17	Ring Cushion L24/2.0	DEC2958				
18	SW Ring	DNK4070				
19	Adjust Plate	DNK4178				
20	Jog Holder	DNK4545				C
21	Jog B	DNK4557				
22	Gear ARM	DNK4559				
23	Gear	DNK4560				
24	Smoother	DNK4561				
25	Load Gear A	DNK4562				
26	Jog A	DNK4586				
27	Sheet SW	DSX1065				
28	Roller A Assy	DXB1825				
29	Jog Stay Assy	DXB1876				
30	Roller B Assy	DXB1877				D
31	Rotary Knob C	DAA1194				
32	TEMPO Knob	DAC2061				
33	VINYL Knob	DAC2063				
34	LOOP Knob	DAC2066				
35	Auto Beat Loop Knob	DAC2069				
36	Quick Return Knob	DAC2070				
37	PLAY Knob	DAC2286				
38	Set Knob (Eject)	DAC2287				E
39	CALL Knob	DAC2289				
40	RELOOP Knob	DAC2291				
41	Slide Knob	DAC2292				
42	TEXT/A.CUE Knob	DAC2294				
43	Folder Search Knob	DAC2298				
44	DEL/MEMO Knob	DAC2299				
45	Reverse Knob	DAC2364				
46	Slide Sheet (gray)	DAH2374				
47	Display Panel	DAH2418				F
48	Earth Plate (CU)	DBK1224				
49	Vessel Sheet	DEC2495				