

2.2 BOTTOM SECTION


1

2

3

4

Refer to "2.3 CONTROL PANEL SECTION".

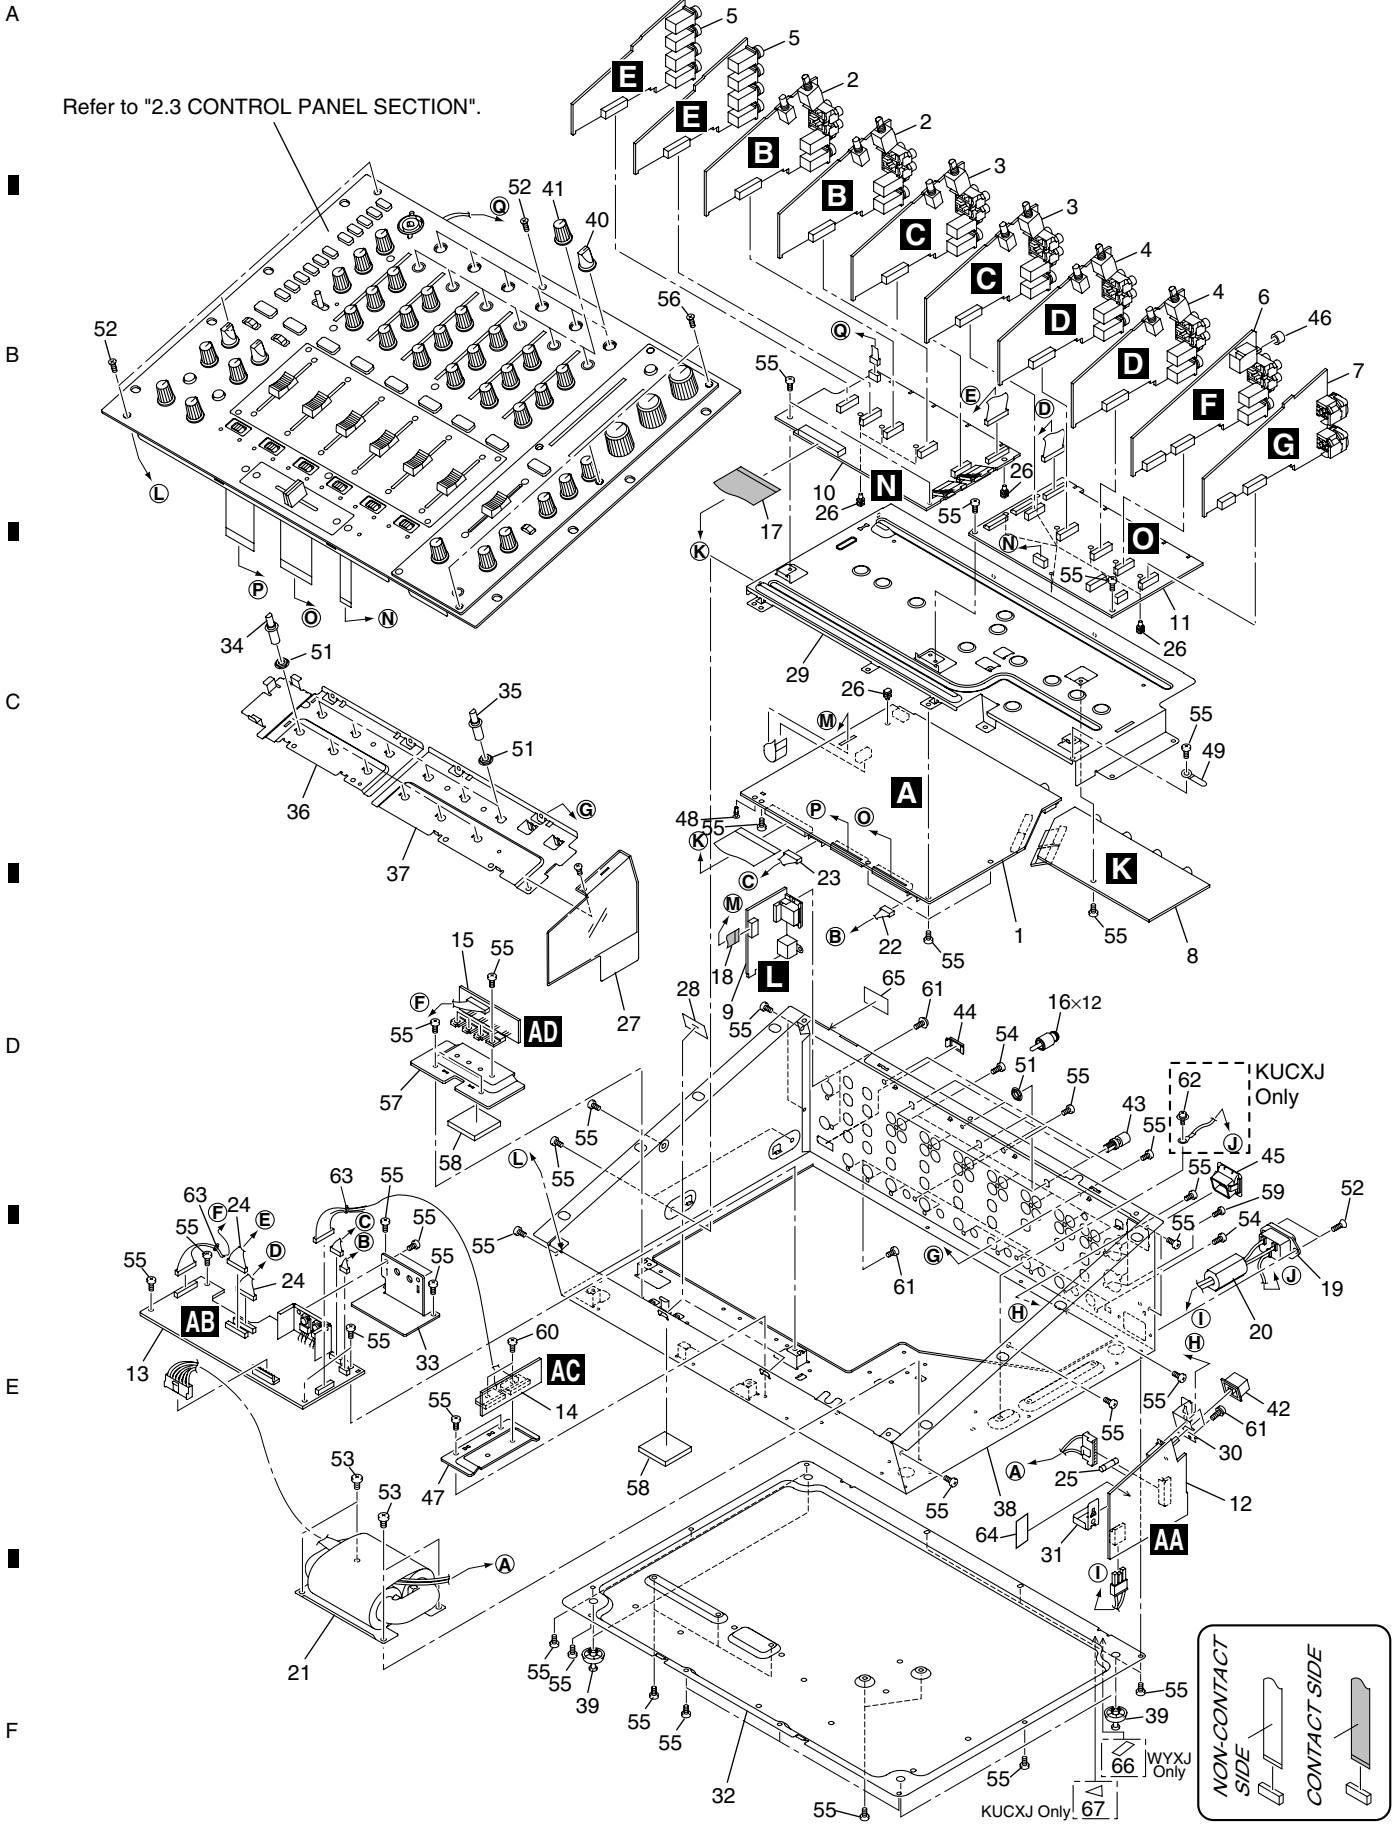

8

DJM-1000

1

2

3

4

(1) BOTTOM SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	DIGITAL MAIN Assy	DWG1586	36	PCB Stay V (A) Assy	DXB1856
2	CH1/CH2 INPUT Assy	DWX2501	37	PCB Stay V (B) Assy	DXB1857
3	CH3/CH4 INPUT Assy	DWX2502	NSP 38	Chassis	See Contrast table (2)
4	CH5/CH6 INPUT Assy	DWX2503	39	Leg Assy	REC-434
5	SEND/RETURN Assy	DWX2408	40	Rotary SW Knob	DAA1167
6	BOOTH/REC Assy	DWX2409	41	Rotary Knob B	DAA1171
7	MASTER Assy	DWX2410	42	Power Knob	DAC2133
8	DIGITAL SUB Assy	DWX2414	43	Earth Terminal with Knob	DKE1014
9	VISUAL LINK Assy	DWX2413	44	Blind Cap	DNK4218
10	BUS1 Assy	DWX2422	45	Power Knob Guard	DNK4335
11	BUS2 Assy	DWX2423	46	Select Knob (S)	DAA1166
12	ACIN Assy	See Contrast table (2)	47	Heatsink A	DNG1092
13	POWER Assy	DWR1384	48	Nyron Rivet (3 x 4.5)	RBM-003
14	REG1 Assy	DWR1385	NSP 49	Cord Clamper	ZCB-069Z
15	REG2 Assy	DWR1386	50	Flange Nut M12	DBN1012
16	Short Pin Plug	AKM7008	51	Flange Nut M7	DBN1011
17	40P Flexible Cable	DDD1288	52	Screw	CMZ30P100FTB
18	10P Flexible Cable	DDD1289	53	Screw	BBZ40P060FTC
⚠ 19	AC Inlet Assy	See Contrast table (2)	54	Screw	BPZ30P080FTB
⚠ 20	Ferrite Core	DTH1195	55	Screw	BBZ30P060FTB
⚠ 21	Power Transformer	See Contrast table (2)	56	Screw	CMZ30P100FNI
22	Connector	PF04EE-S07	57	Heatsink B	DNG1093
23	Connector	PF06EE-S15	NSP 58	Silicone Sheet C	DEB1764
24	Connector	PF10EE-S30	59	Screw	BBZ26P060FTB
⚠ 25	Fuse (FU1)	See Contrast table (2)	60	Screw	BBZ30P080FTC
26	Card Spacer	AEC7214	61	Screw	PMH30P100FTB
27	Shield Plate (A)	DEC2839	62	Screw	See Contrast table (2)
28	Shade Sheet A	DEC2842	NSP 63	Binder	ZCA-BK1
29	PCB Stay (H)	DNF1704	NSP 64	Fuse Card	DAX1015
30	Power Switch Stay	DNF1705	NSP 65	Label	VRW1629
31	Power PCB Stay	DNF1716	66	Label (WEEE)	See Contrast table (2)
32	Bottom Plate	DNH2620	67	Label	See Contrast table (2)
NSP 33	Heatsink Plate B	DNH2644			
34	Extension Shaft (L)	DNK4336			
35	Extension Shaft (L2)	DNK4491			

(2) CONTRAST TABLE

DJM-1000/KUCXJ, WYXJ and RLTXJ are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Symbol and Description</u>	<u>DJM-1000 /KUCXJ</u>	<u>DJM-1000 /WYXJ</u>	<u>DJM-1000 /RLTXJ</u>
⚠	12	ACIN Assy	DWR1383	DWR1383	DWR1399
⚠	19	AC Inlet Assy (3P)	DKP3730	Not used	Not used
⚠	19	AC Inlet Assy (2P)	Not used	DKP3731	DKP3731
⚠	21	Power Transformer	DTT1179	DTT1178	DTT1180
⚠	25	Fuse (FU1 : 2A)	REK1111	Not used	Not used
⚠	25	Fuse (FU1 : 1.6A)	Not used	REK1024	REK1024
NSP	38	Chassis	DNA1304	DNA1306	DNA1326
	62	Screw	PMH40P080FTC	Not used	Not used
	66	Label (WEEE)	Not used	ARW7322	Not used
	66	Label	DRW1975	Not used	Not used

2.3 CONTROL PANEL SECTION

1

2

3

4

A


B

C

D

E

F

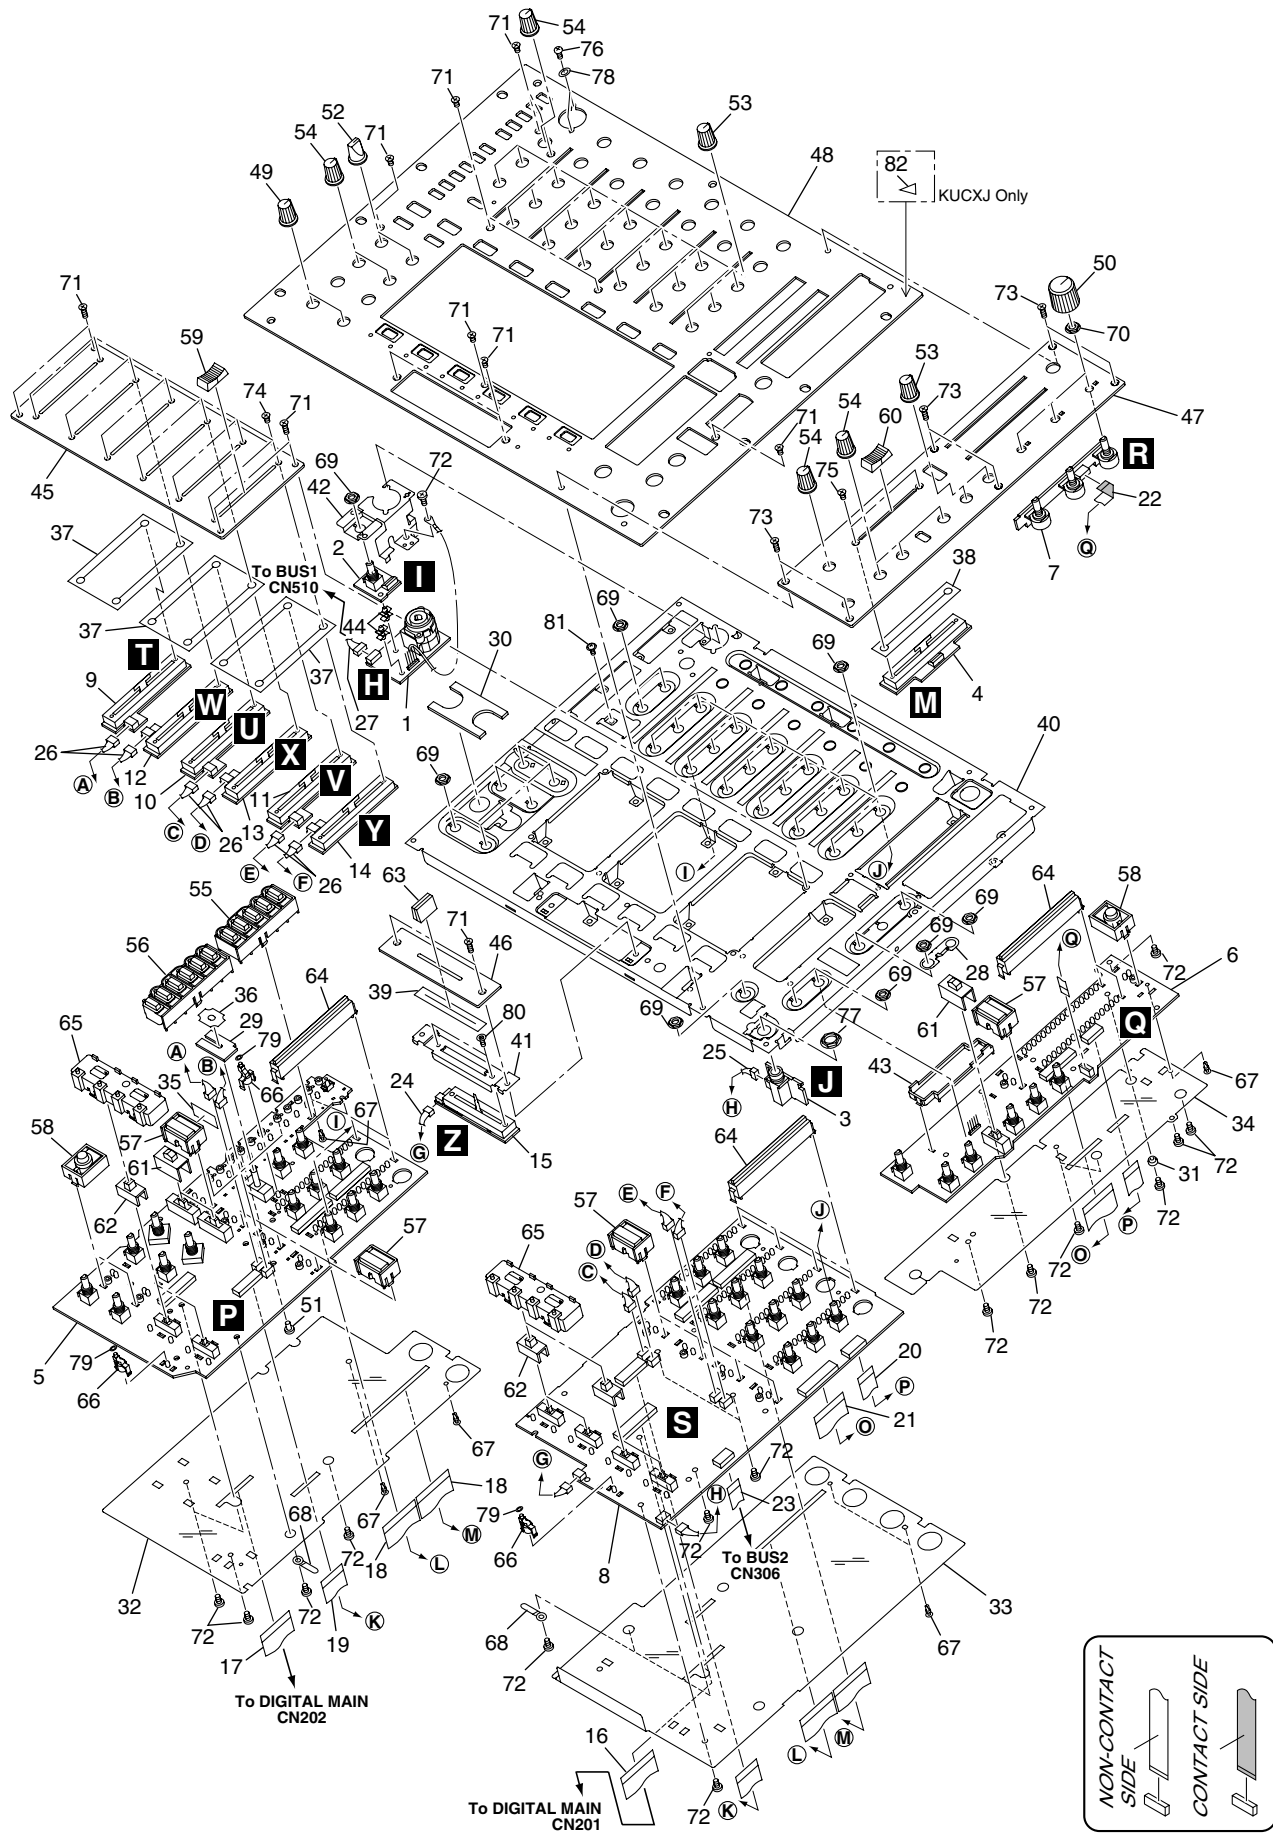

1

2

3

4

5 6 7 8

CONTROL PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	MIC Assy	DWX2411	42	MIC. Stay	DNF1720
2	MIC VR Assy	DWX2466	43	Master Fader Holder	DNK4374
3	HP Assy	DWX2412	NSP 44	PC Support	VEC1508
4	MASTER FADER Assy	DWX2421	45	CHF Panel	DAH2414
5	PANEL1 Assy	DWX2427			
6	PANEL2 Assy	DWX2428	46	CRF Panel	DAH2415
7	ISOLATOR Assy	DWX2425	47	Master Panel	DNB1135
8	PANEL3 Assy	DWX2426	48	Control Panel	DNB1136
9	CH1/CH3/CH5 FADER Assy	DWX2416	49	Rotary Knob (SS)	DAA1164
10	CH1/CH3/CH5 FADER Assy	DWX2418	50	VR Knob (ISO)	DAA1165
11	CH1/CH3/CH5 FADER Assy	DWX2443	51	Nyron Rivet	DEC2870
12	CH2/CH4/CH6 FADER Assy	DWX2415	52	Rotary SW Knob	DAA1167
13	CH2/CH4/CH6 FADER Assy	DWX2417	53	Rotary Knob A	DAA1170
14	CH2/CH4/CH6 FADER Assy	DWX2442	54	Rotary Knob B	DAA1171
15	CROSS FADER Assy	DWX2424	55	Set Knob (LINK)	DAC2213
16	31P Flexible Cable	DDD1280	56	Set Knob (FS)	DAC2214
17	28P Flexible Cable	DDD1281	57	CUE Knob	DAC2215
18	31P Flexible Cable	DDD1282	58	ISO Knob	DAC2216
19	20P Flexible Cable	DDD1283	59	CHF Knob	DAC2217
20	13P Flexible Cable	DDD1284	60	MF Knob	DAC2218
21	28P Flexible Cable	DDD1285	61	Slide SW Cap (A)	DAC2219
22	7P Flexible Cable	DDD1286	62	Slide SW Cap (B)	DAC2220
23	10P Flexible Cable	DDD1287	63	Slider Knob (L)	DNK4210
24	Connector	PF03PP-R10	64	Level Meter Lens	DNK4332
25	Connector	PF04PP-R07	65	Set Lens	DNK4333
26	Connector	PF04PP-R10	66	LED Lens	DNK4334
27	Connector	PF05PP-R10	67	Nyron Rivet (3 x 4.5)	RBM-003
28	Earth Spring	DBK1265	NSP 68	Cord Clamper	ZCB-069Z
29	Shade Spacer A	DEB1729	69	Flange Nut M9	DBN1008
30	Shade Spacer B	DEB1730	70	Flange Nut M7	DBN1011
31	POM Bush (M3)	DEC2397	71	Screw	CMZ30P100FTB
32	Insulation Sheet (A)	DEC2762	72	Screw	BBZ30P060FTB
33	Insulation Sheet (B)	DEC2763	73	Screw	CMZ30P100FNI
34	Insulation Sheet (C)	DEC2764	74	Screw	CMZ30P050FTB
35	Shade Sheet B	DEC2843	75	Screw	CMZ30P050FNI
36	SW Packing	DEC2848	76	Screw	BPZ30P120FTB
37	CH Fader Packing	DEC2865	77	Flange Nut M12	DBN1012
38	Master Fader Packing	DEC2866	78	PC Washer	DEC2868
39	Fader Packing	DEC2867	79	Poly. Slider Washer	WA26D080D025
NSP 40	Panel Stay	DND1253	80	Screw	DBA1262
41	CRF Stay	DNF1706	81	Screw	AMZ26P040FTC
			82	Label	See Contrast table (2)

(2) CONTRAST TABLE

DJM-1000/KUCXJ, WYXJ and RLTXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-1000 /KUCXJ	DJM-1000 /WYXJ	DJM-1000 /RLTXJ
	82	Label	DRW1975	Not used	Not used